

Warranty

Whilst every Lucent product is manufactured to the highest quality standards, we offer a comprehensive Warranty for complete peace of mind.

Residential Use

1 Year	Replacement products or parts
1 Year	Finish
1 Year	Labour

Commercial Use

1 Year	Replacement products or parts
1 Year	Labour

Warranty may become void due to any of the following:

- Inability to provide proof of purchase or equivalent documentation
- Product not installed by a licensed Plumber
- Failure to install product to national standards and state regulations
- Failure to install product in accordance with manufacturers installation instructions
- Fitting of non-approved flow controllers in tap bodies or outlets
- If products are used for outdoor applications.
- Product used for non-potable water applications.
- Damage because of insufficient flushing of lines prior to installation. Service, repairs, or installation of non-Lucent replacement parts undertaken without Lucent's prior written approval.
- Damage to finishes caused by non adherence to cleaning instructions.

Cleaning Instructions:



CLEAN MICROFIBRE
CLOTH



SOAPY WATER



PH BALANCE
SOAP - BASED
CLEANSER

Warranty Service


For all warranty service calls please contact your local store.
Phone: 1300 474 714
E-mail: warranty@lucentdesigns.com.au



INS_1045.pdf rev.1.0

LUCENT[®]

Installation and Operating Instructions

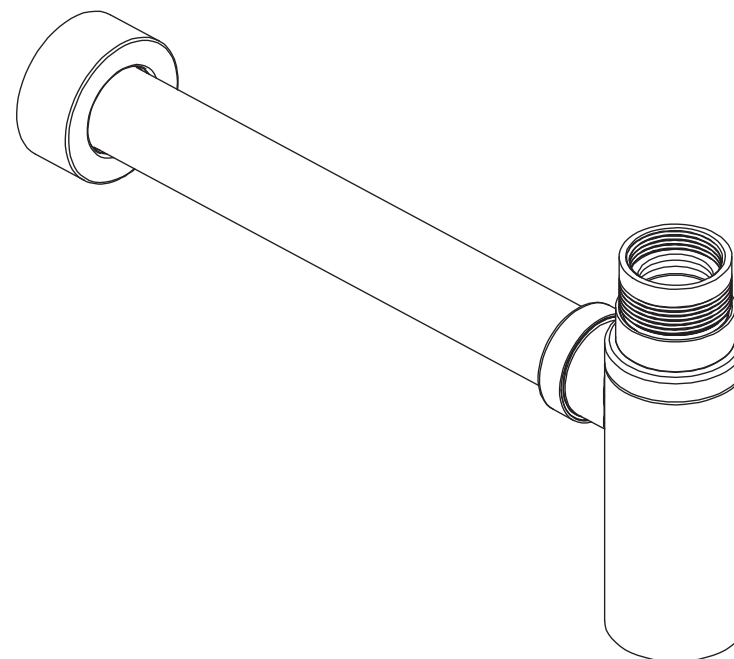

BOT-03

BOTTLE TRAP 40MM CONICAL WITH ADAPTER

Thank you for purchasing a quality Lucent product. Please note that this product must be installed by a qualified and registered plumber who is compliant with all the relevant regional requirements and who holds current certification.

Note: Please read all instructions prior to installation to limit warranty disputes should a claim arise.


Installation Instructions

Note to Plumber: Please provide this leaflet to the owner after installation.

STEP 1


Screw the Inlet Nut of the Bottle Trap to the Waste Outlet.

Note: Use of the 32mm Adaptor and Seal may not be required.

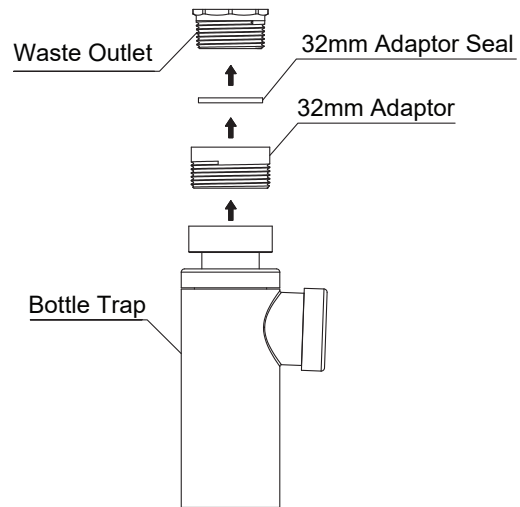


STEP 2

Adjust the Inlet Pipe to the desired height and tighten the Body Nut.

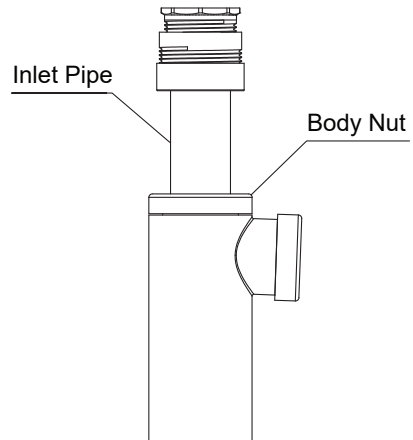

STEP 3

Cut the Outlet Pipe to length and insert into the Trap Outlet, Install the Cover Plate and Kee Seal.

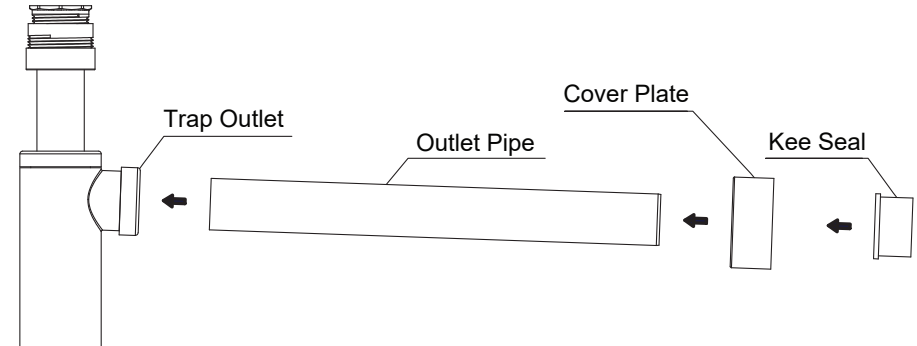

STEP 4

Tighten the Outlet Nut.

