

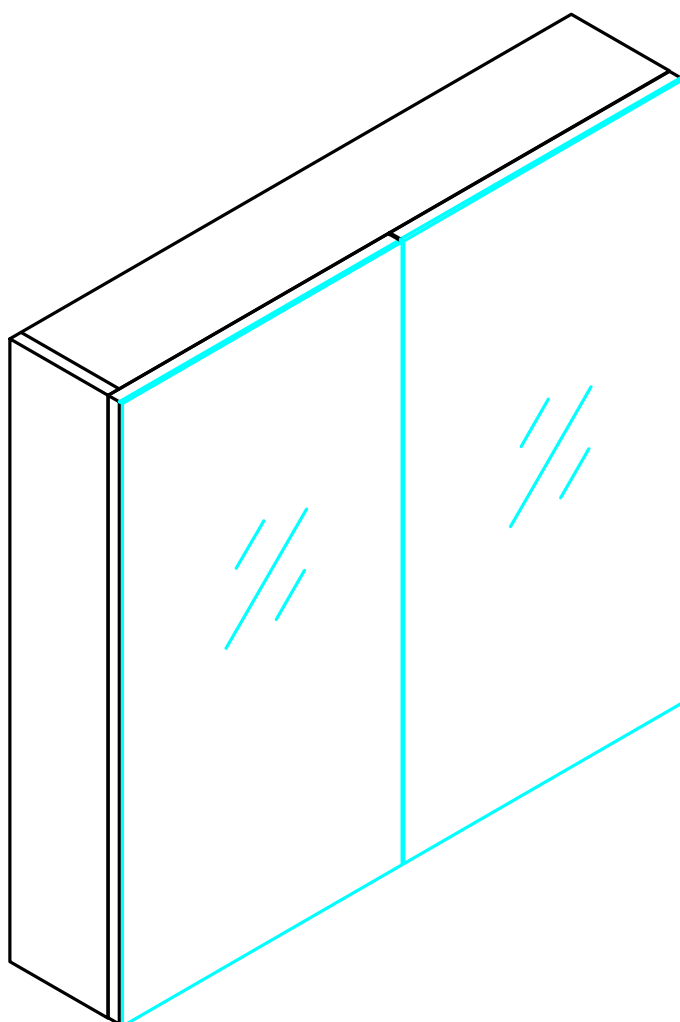










Assembly Instruction

Packing list

A  10mm x4	D  x4
B  Ø6x70mm x4	C  x4

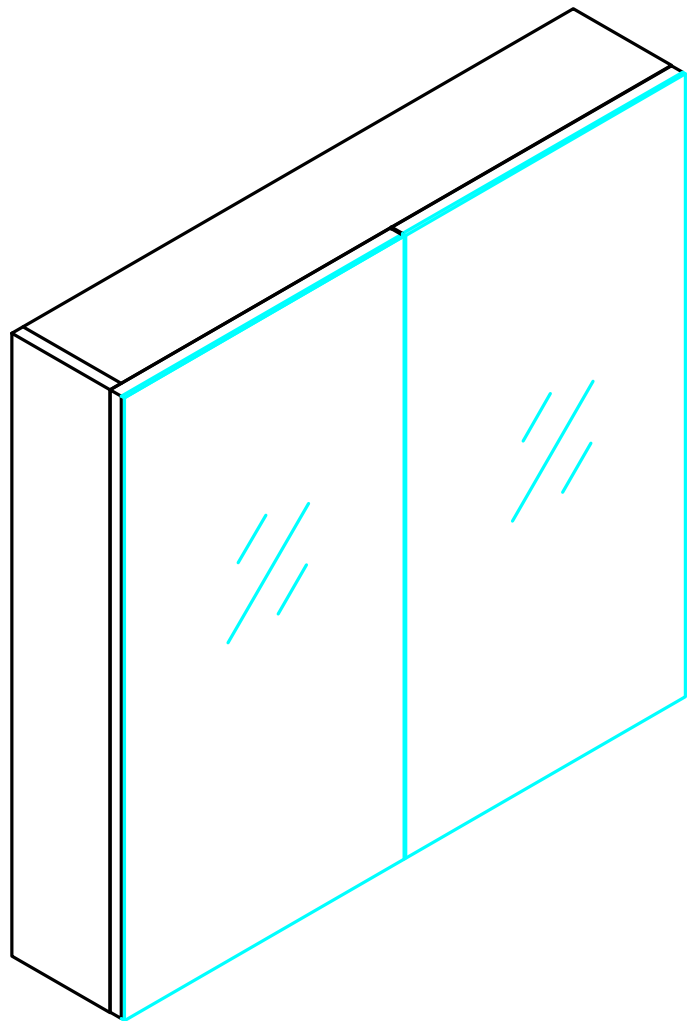


TOOLS AND MATERIALS REQUIRED (NOT SUPPLIED)

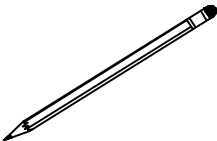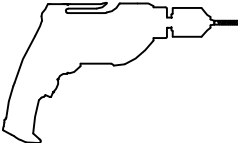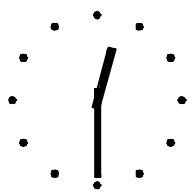			
			20min 

INSTALLATION INSTRUCTIONS

Please read these instructions carefully before commencing installation. Remove all wrapping materials, staples, and packing straps from the carton. Ensure all parts are present before assembly. Place all wooden components on a clean, flat surface—such as carpet or a rug—to prevent scratching or damage.

1. Locate timber noggins or reinforced fixing points within the wall to ensure solid support for the mounting screws.
2. Drill pilot holes in the cabinet, aligning them with the pre-determined timber supports in the wall.
3. Secure the cabinet to the wall using appropriate screws suitable for the wall material.

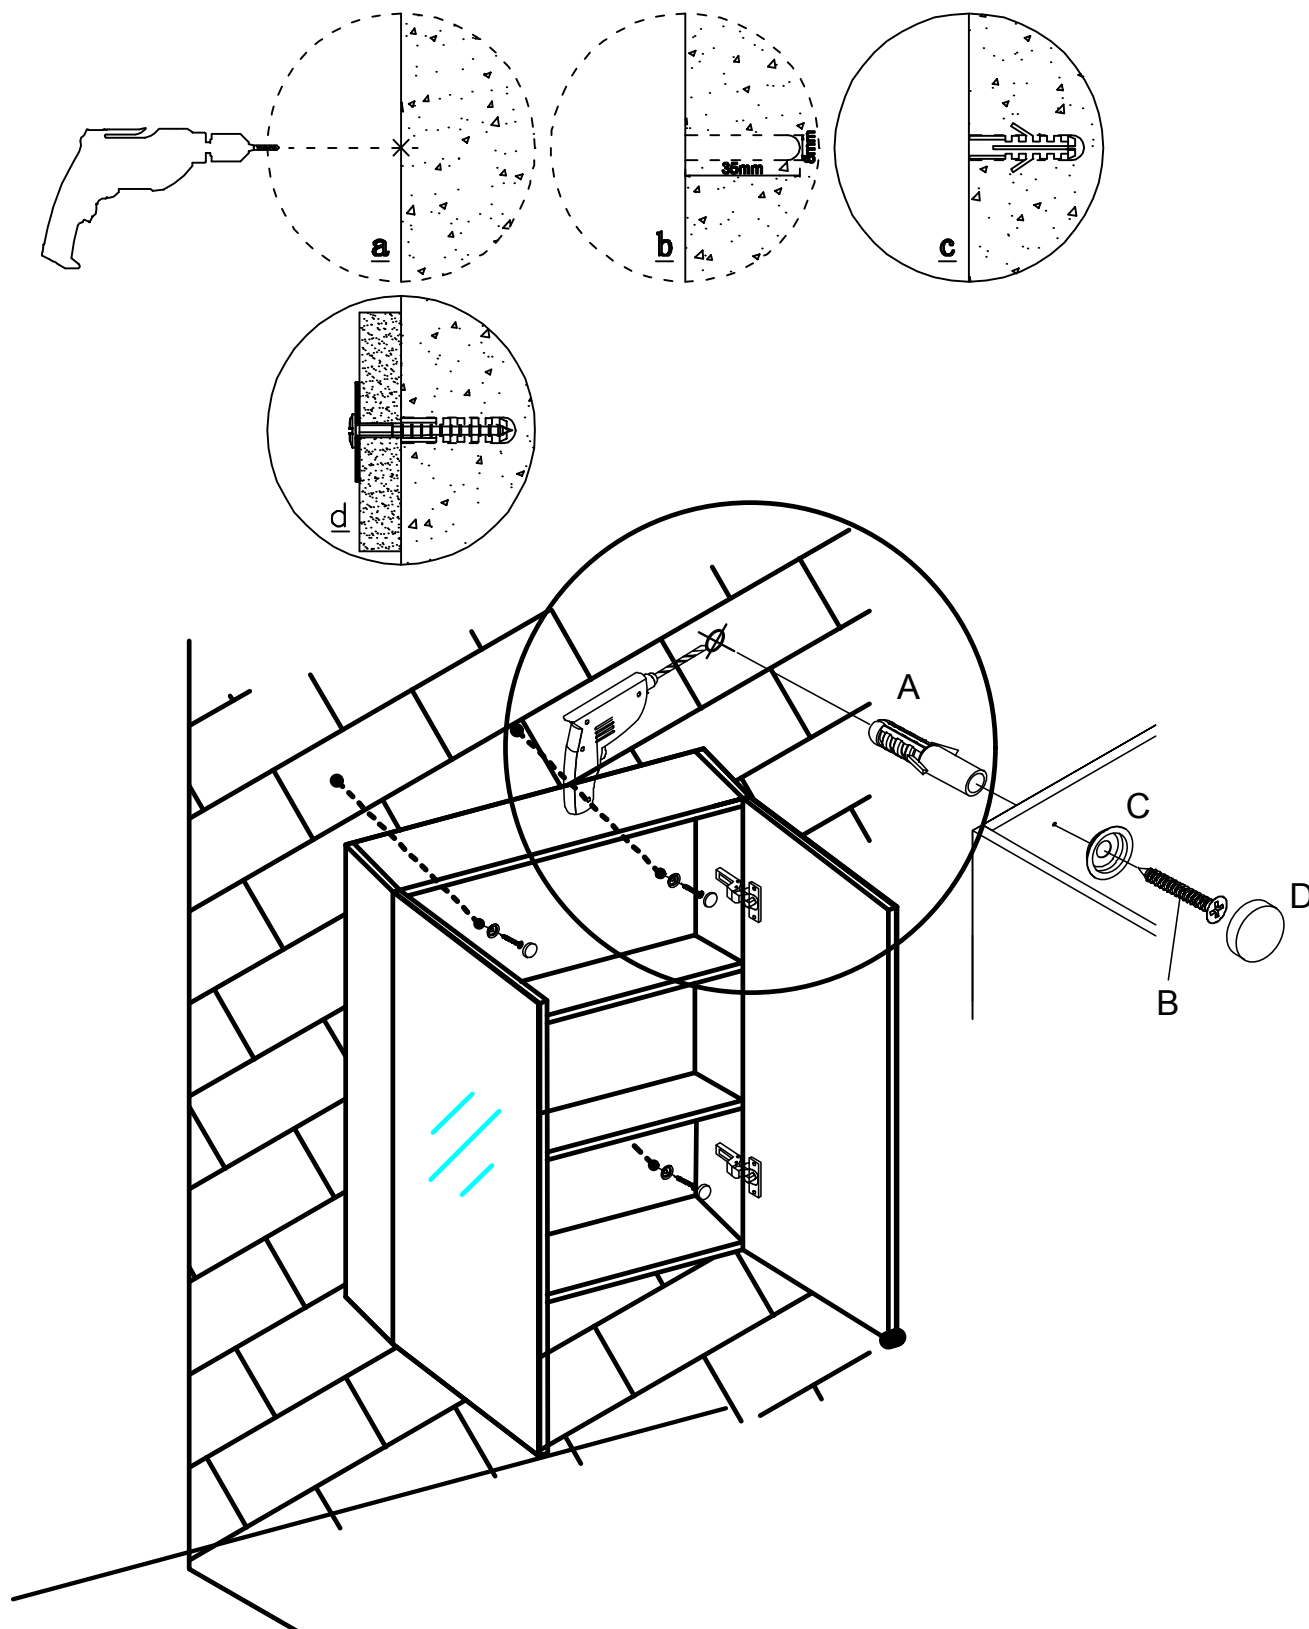

HINGE ADJUSTMENT INSTRUCTIONS

