



Laundry Stone top & Sink Installation

IMPORTANT CONDITIONS

Please inspect thoroughly before installation to ensure that the product has not been damaged and is correct. Do not install if any damage is found.

No claims for damage or incorrect items will be recognised after installation.



CONDITIONS:

1. Items must be installed by a licensed tradesperson only.
2. The installation of the product is in accordance with the instructions provided, your Otti Australia Warranty will be void.

It is the responsibility of the installer to make adjustments to doors and drawers after installation if required.

Included:-

- Stone Top
- Laundry Sink
- 6x Undermount Clips
- 35mm Drill Bit

Tools Needed:-


- Electric Drill or Screw Driver
- Silicone
- Fine Grit Sandpaper

- 1 Remove all parts from the packaging, Check and prepare all parts for installation.



Kit Inclusions:- 1x Stone Top, 1x Laundry Sink and under, 6 x undermount clips

- 2 Lay the stone top upside down, place the sink in location of the sink cutout. Make sure taphole is cut before installing the sink.

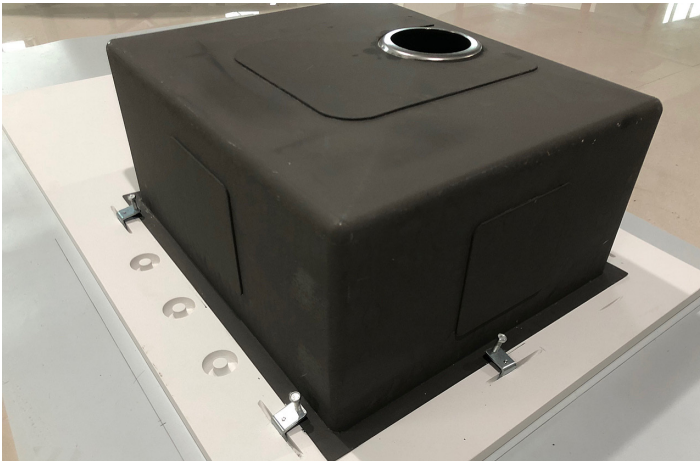

3 Attach the brackets to the sink

Before putting the sink into place, attach the brackets as per image instructions and make sure they are attached correctly this is to keep your sink in place.

4 Insert the sink and tighten the brackets

Insert the laundry sink into the hole in the benchtop, and make sure it is sitting straight. With a screwdriver, tighten the brackets so that the sink is secured underneath the benchtop for a tight finish. Repeat this step until all of the brackets are tight and the trough is secure.



5 Place Stone top in Place

Once the sink is installed ensure 2 people lift and place the stone top with sink assembled on top of the cabinet, in the location desired. Ensure sink does not move when placing the stone top in its final location and adjust sink brackets if required.

Product Warranty

The following conditions apply with respect of the warranty given in this certificate:

10 years - Stainless Steel Bowl

5 years - Stone top

10 years - Cabinet

12 months - Parts

Components from the date of original purchase for domestic use.

Universal Taphole

Universal Pre-Drilled Taphole

Included:-

- Stone Top
- 35mm Drill Bit - Reusable




35mm

Tools Needed:-

- Electric Drill
- Fine Particle Mask
- P2 Respirator Dust Mask With Valve or of higher standard
- Work Safety glasses
- Silicone



Front View

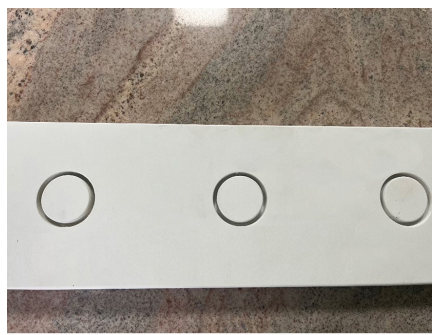


Back View

1

Place the stone top facing up and inspect for any issues. Do Not install if there is any damage.

2

Turnover the stone top to see semi pre-drilled holes the manufacture have prepared. Select one of these pre-drilled locations to drill out your taphole.

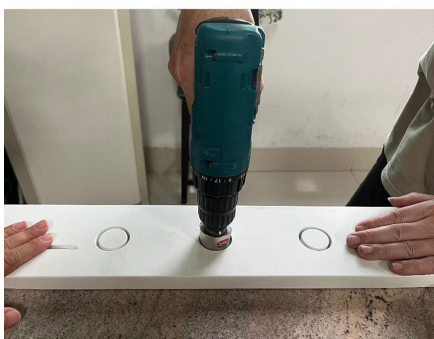

3

Using your pre-drilled hole guide, clamp and fasten down the stone top so there is no movement.

Use a drill bit provided or use a 35mm drill bit.

Use a small amount of water or vaccum on the stone surface when drilling through. Do Not Cut Dry cut the stone.

Ensure you wear protective gear before drilling - Fine Particle Mask
P2 Respirator Dust Mask With Valve or an of higher standard
- Work Safety glasses

4

Remove any chipped piece of stone and smooth the edges of the tap hole with sandpaper or a file.



View Video
Scan QR code

