



IMPORTANT: Handle Installation Notice

Confirm handle position and screw length before drilling.

Before Drilling


Our vanity cabinet doors and drawer fronts are **not pre-drilled**. Customers may choose their preferred handle position or use their own DIY handles.

Screw Selection

- Door panel or drawer front only (YELLOW AREA): **use short screws.**
- Through the drawer-front connection area (BLUE AREA): **use long screws.**
- Both short and long screws are supplied.

Best Practice

Pre-drill from the outside to the inside. Use a **5 mm brad point drill bit** and place a spare board behind the panel to help prevent chipping or breakout.

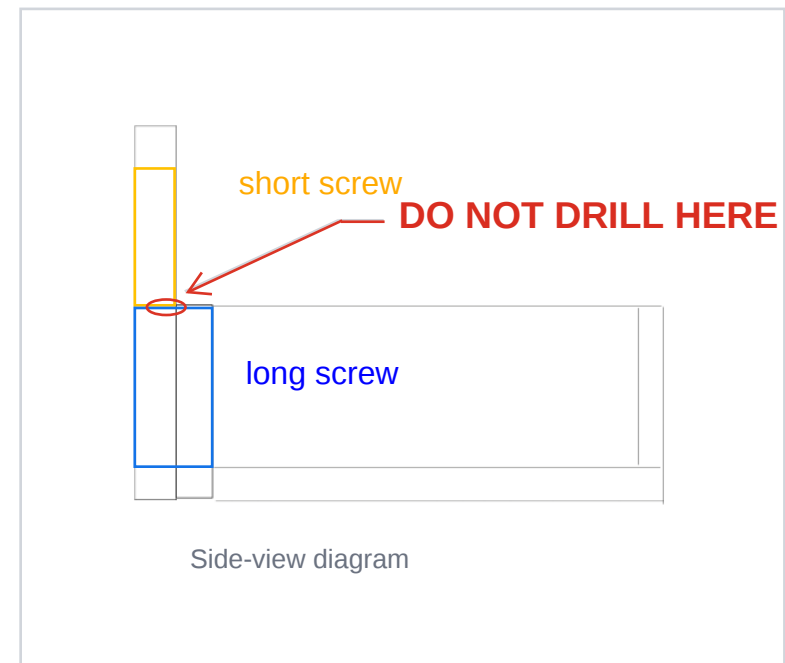

Installer must confirm the exact handle position with the customer before drilling any holes.