

THE BOLD LOOK OF KOHLER

INSTALLATION INSTRUCTIONS QUIET-CLOSE QUICK RELEASE TOILET SEAT




BEFORE YOU BEGIN

Thank you for choosing the Bold Look of Kohler. Kohler craftsmanship offers you a rare combination of proven performance and graceful sophistication that will satisfy you for years to come. The quality and dependability of your Kohler toilet seat will surpass your highest expectations. We're very proud of our products here at Kohler and we know you will be too.

Please take a few minutes to study this manual. Pay special attention to the Care and Cleaning instructions. All information in this manual is based upon the latest product information available at the time of publication. At Kohler we constantly strive to improve the quality of our products. We reserve the right to make changes in product characteristics, packaging or availability at any time without notice.

Care and Cleaning of Seats: Use warm soapy water only on toilet seats. Do not use abrasive cleaners or chemicals. This can damage the surface of the seat.

SEAT TO PAN INSTALLATION

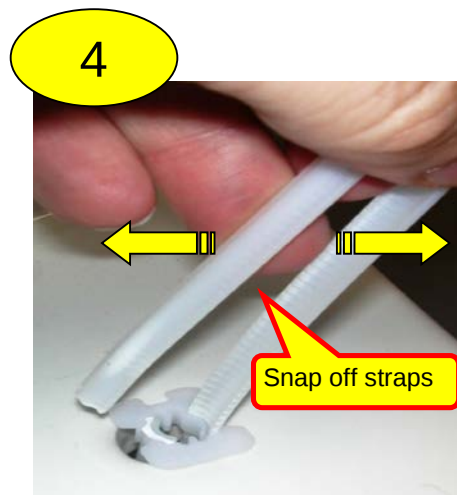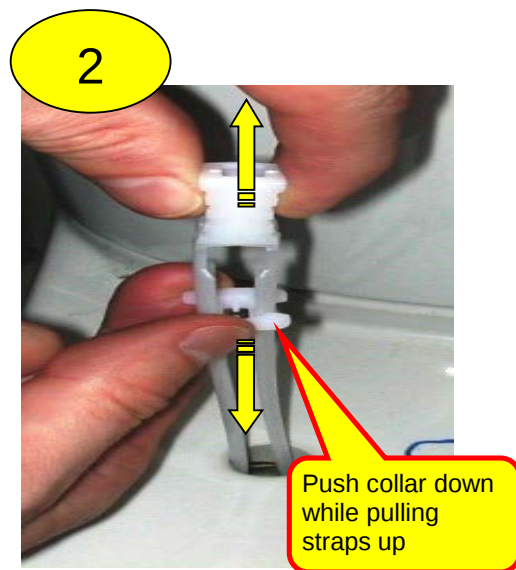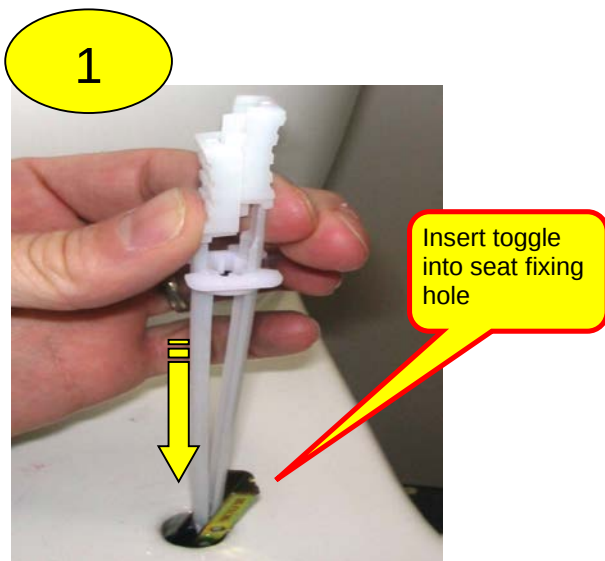

5



6



7




8




9



10

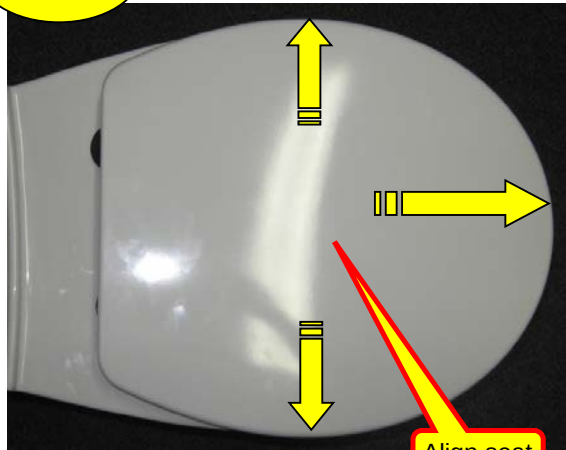


11

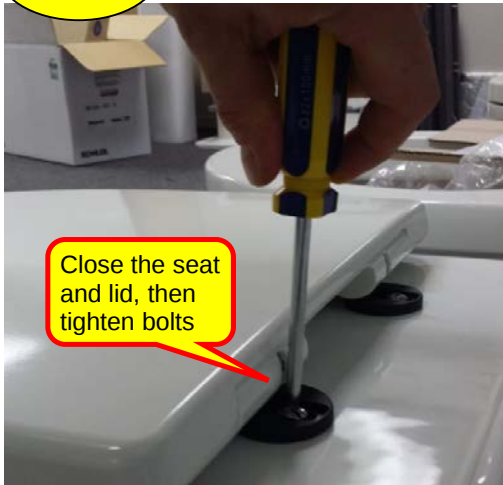

Close the seat and lid, then tighten bolts

12

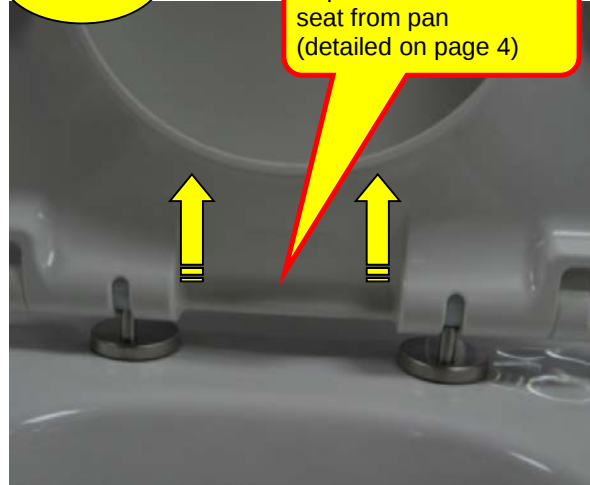

Separate and remove seat from pan (detailed on page 4)

13




Ensure bolts are fully tightened

14



Place hinge plate caps onto hinge plates

15

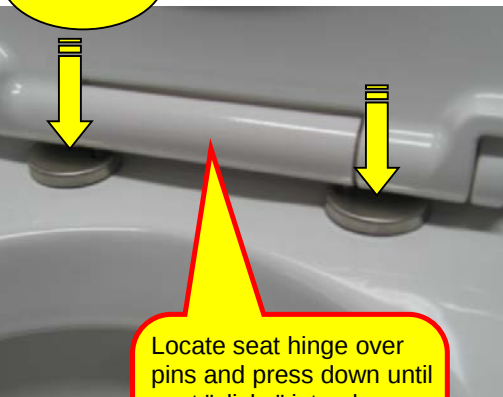



Locate seat hinge over pins and press down until seat "clicks" into place.

Repeat steps 10-14 if necessary



Your Quick Release seat is now installed. To utilise the Quiet Close design, partially shut the seat and it will softly fall until closed.

QUICK RELEASE SEAT REMOVAL

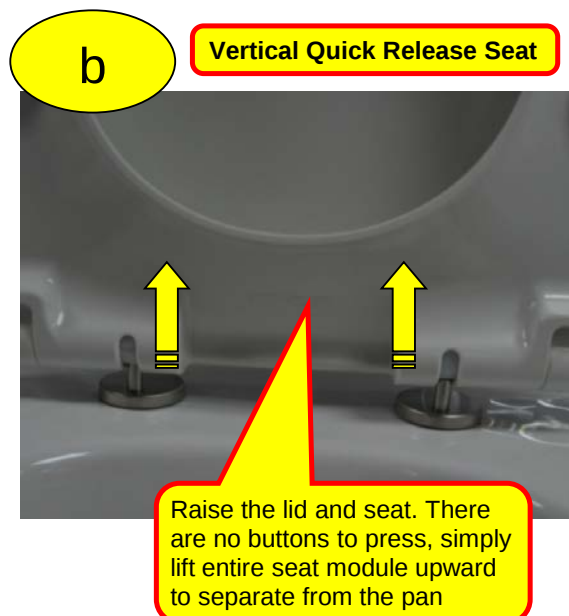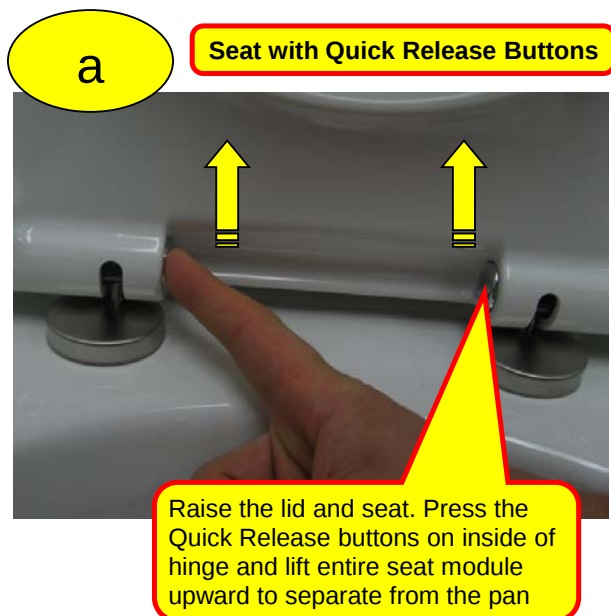

To re-attach the seat unit:

Locate seat hinge over the hinge plate pins and press down until the seat "clicks" into place (step 15 on page 3)

CONTACT AND WARRANTY

PLEASE VISIT THE WEBSITE FOR WARRANTY INFORMATION

KOHLER

CALL US FOR HELP

NEW ZEALAND
KOHLER NZ LTD

Free Ph: 0800 564 537 (0800 KOHLER)
Free Fax: 0800 664 488
www.kohler.co.nz

AUSTRALIA
KOHLER CO.

Free Ph: 1 800 KOHLER
1 800 564537
www.kohler.com.au

Installation & User Guide

Dual-Flush Toilet

NOTE: If your new toilet pan has Side Entry holes, please ignore this installation guide and refer to document # 1265059-A2.

KOHLER®

Tools And Materials




10" Adjustable Wrench



Supply Shut-Off Valve




Tape Measure

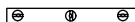


Level



Sponge

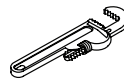

Pipe Wrench

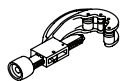

Tubing Cutter



Safety Glasses



Drill and assorted bits

Plus:

- Pan Connector
- Metal File
- 1/2" Nut Driver/Socket
- Hacksaw
- Screwdriver
- Caulking Gun & Sealant

Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers are listed on the back cover. Thanks again for choosing Kohler Company.

Before You Begin



CAUTION: Risk of personal injury or product damage. Handle with care. Vitreous china can break or chip if the product is handled carelessly.

- ☐ Observe all local plumbing and building codes. Installation shall be in accordance with AS/NZS 3500 and AS/NZS 6400.
- ☐ Carefully inspect the new toilet for damage.
- ☐ If the existing toilet does not have a supply shut-off valve below the cistern, install one before installing the new toilet.
- ☐ Install sufficient backing behind the finished wall to provide a secure material for the anchoring devices.
- ☐ Water supply hose not supplied. Your plumber can provide a suitable hose of sufficient length from the shut-off valve to the tank inlet.




Pan Installation

- 1 Remove the existing toilet: Turn off the water supply and flush the toilet, then sponge out all remaining water from the cistern. Disconnect the supply hose from the shut-off valve and remove the old pan and cistern.




CAUTION: Risk of hazardous gases. If the new toilet is not to be installed immediately, temporarily stuff a rag in the closet flange. Ensure this is removed before installing the new toilet.


- 2 Define the position of the connector: Place the connector onto the pan, and position the connector between the outlet and waste pipe. Installation instructions are supplied with each respective pan connector.

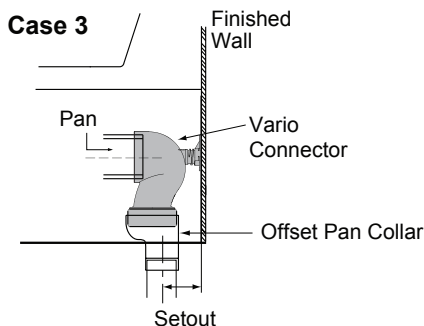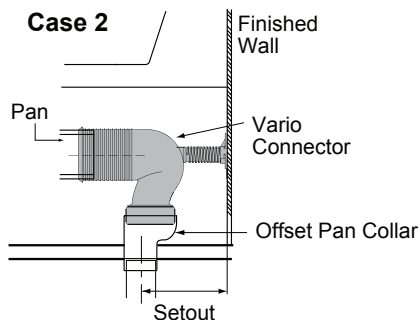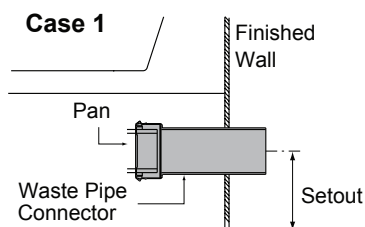

3 Using the template, mark the positions of the floor fixing kit holes.

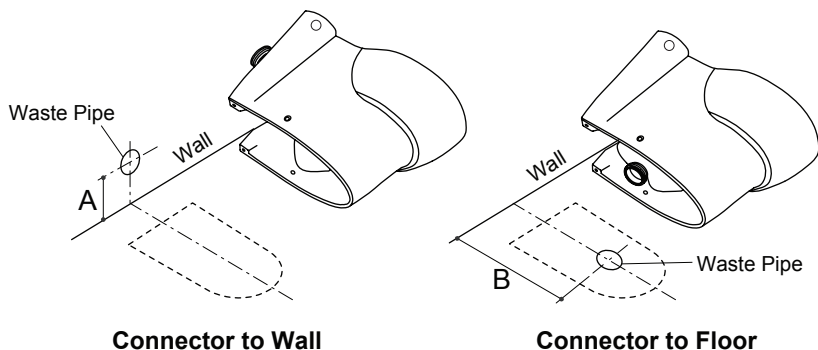

4 Drill fixing holes at the marked locations on the floor and insert the anchors where required.

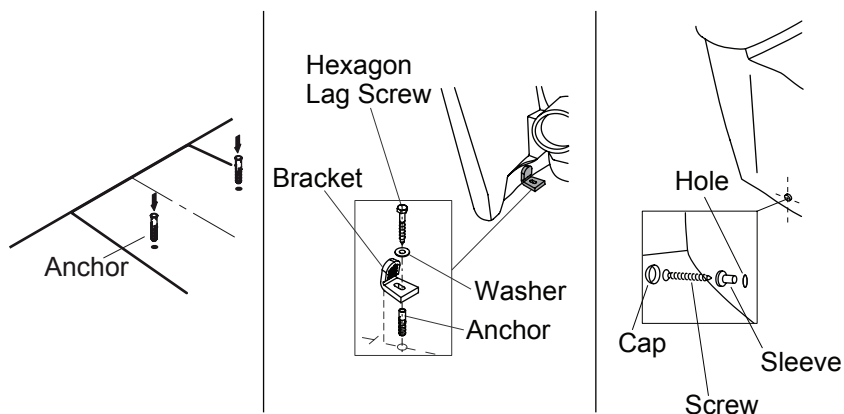

5 Place a washer onto each of the hexagon screws and fix the brackets to the floor.



6 Position the toilet in the marked location, while ensuring an effective connection is made with the pan connector.

7 Install the plastic screw sleeves and use the screws to fix the toilet to the brackets. Attached the chromed caps to the screw heads.

Cistern Installation

- 1 Identify the type of cistern configuration and ensure the components are installed securely.


A) Top Rear Entry with Side Inlet Valve

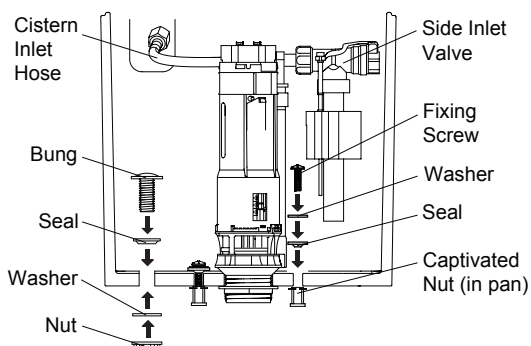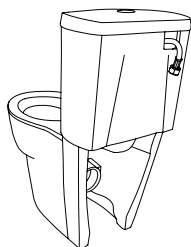


B) Bottom Inlet



Cistern Inlet Hose (not supplied)

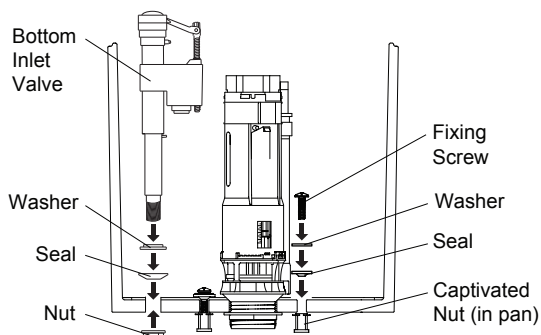


- 2 Position the cistern on the pan by centering the gasket on the pan inlet. Securely tighten the screws so the cistern is level.

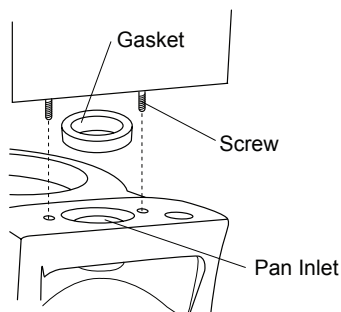


- 3 Connect the supply hose to the cistern inlet and connect the hose to the water supply shut-off valve to test the system for leaks. Shut off the water supply and disconnect the hose.

Push Button Installation


1 Disassemble the push rods.

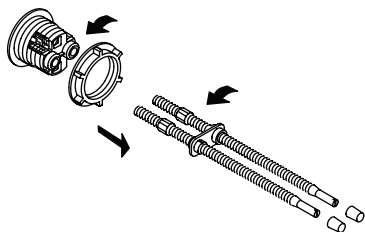


2 Using the push rod, measure the distance between the flush valve and the top of the cistern lid. Mark this length and cut the push rod to length.

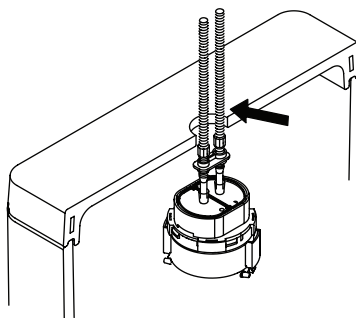

3 Reassemble the push rods.

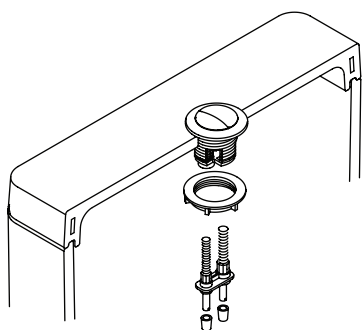


4 Fit the lid and test the buttons. Adjust the rods as required.

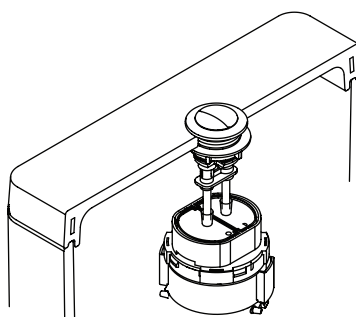


Flush Valve Removal and Installation

Flush Valve A

- 1 Release flush valve by turning anti-clockwise and pulling straight up on the canister.

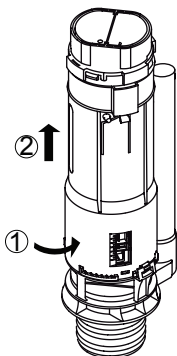


- 2 Assemble flush valve by pushing straight down into the canister and turning clockwise.

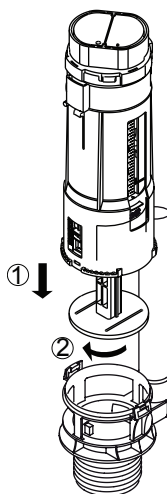


Flush Valve B

- 1 Release flush valve by squeezing the tabs on both sides of the canister and pulling straight up out of the flush valve.

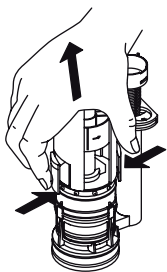


- 2 Assemble flush valve by pressing it into the flush valve so it snaps into place.

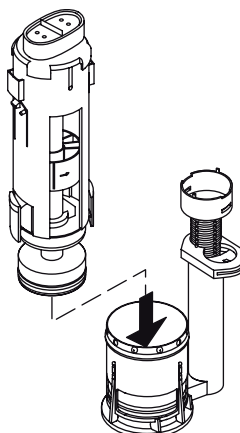

Finalising Installation

1 Install the seat as per the supplied seat instructions.

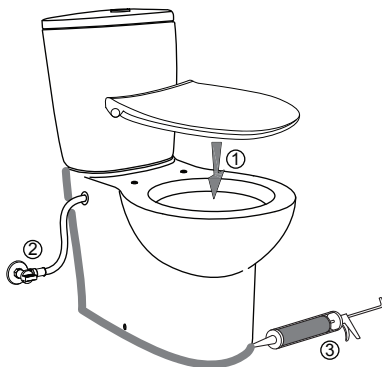

2 Make final connection of water supply hose to shut-off valve. Test the system for leaks.

3 Apply a suitable sealant between the pan and adjacent surfaces.

Your toilet suite is now installed.
Please refer to the Homeowner's Guide for care & cleaning instructions.

CONTACT AND WARRANTY INFORMATION

For warranty information, please visit our website

Australia

www.au.kohler.com

New Zealand

www.kohler.co.nz

KOHLER®

CALL US FOR HELP

NEW ZEALAND
KOHLER NZ LTD

Free Ph: 0800 564 537 (0800 KOHLER)
Free Fax: 0800 664 488
www.kohler.co.nz

AUSTRALIA
KOHLER CO.

Free Ph: 1 800 KOHLER
(1 800 564 537)
www.au.kohler.com

Homeowner's Guide

For Dual-Flush Toilets

KOHLER®

Thank You For Choosing Kohler Company

Thank you for choosing the Bold Look of Kohler with your toilet purchase. Kohler craftsmanship offers you a rare combination of proven performance and graceful sophistication that will satisfy you for years to come. The dependability and beauty of your Kohler toilet will surpass your highest expectations. We're very proud of our products here at Kohler and we know you will be too.

Please take a few minutes to study this Homeowner's Guide. Pay special attention to the Care and Cleaning instructions.

All information in this manual is based upon the latest product information available at the time of publication. At Kohler, we constantly strive to improve the quality of our products. We reserve the right to make changes in product characteristics, packaging or availability at any time without notice.

How to Use This Manual

This manual is designed to help you troubleshoot and repair any problems that may develop with the operation of your toilet. If a problem occurs:

- ☐ Refer to the Troubleshooting section to determine a probable cause.
- ☐ Follow the maintenance and repair instructions in this manual to correct the problem.
- ☐ Contact Kohler to determine the availability of replacement parts.
- ☐ Use the information on the back cover of this manual to contact Kohler to order parts, or for help if you cannot correct the problem.

Care and Cleaning

If you live in a hard water area, you should make certain that the holes in the rim are kept clean for proper pan flushing. Toilet cleaners should be used at least once a week. Use a long-handled brush to clean the rim holes and to clean as far into the trap as possible to prevent mineral deposits from forming.

Most toilet cleaners are not harmful to the vitreous china surface of the toilet pan. Kohler Co. does not recommend the use of any cleaning products which are submerged in the cistern as the acids contained within the cleaner will prematurely deteriorate gaskets and valve parts. Please follow the pan cleaner manufacturer's instructions carefully.

DO NOT USE HARSH ABRASIVE CLEANERS.

THESE INSTRUCTIONS CONTAIN WARRANTY AND MAINTENANCE INFORMATION. PLEASE SAVE FOR FUTURE REFERENCE.

Troubleshooting


This troubleshooting guide is for general aid only.

Symptoms	Issue Identification	Corrective action
1. Inlet valve turns on or off by itself without toilet being flushed.	A. Outlet valve seal worn, dirty or damaged.	A. Inspect, clean and, if necessary, replace seal.
2. Inlet valve continues to run, allowing water to enter cistern.	A. Foreign particles may be lodged under the inlet valve seal (located under float valve cap). B. Inlet valve seal (located under inlet valve cap) may be cracked or split. C. Cistern water level set above overflow level.	Refer to separate inlet valve instructions.
3. Incorrect water level height.	A. Float height is incorrect.	Refer to separate inlet valve instructions.
4. Long or noisy cistern fill cycle.	A. Restricted valve inlet or supply line.	A. Fully open the water supply shut-off valve. B. Clean the valve inlet, valve head or supply line. Flush the lines.


Troubleshooting Continued

Symptoms	Issue Identification	Corrective action
5. Noisy cistern fill cycle.	A. Restricted valve inlet or supply line.	A. Partially close the water supply shut-off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. B. Remove dirt or obstructions from the valve head. Flush the line.
6. Poor flush.	A. Water usage too low. B. Trapway obstructed. C. Soil pipe or vent is obstructed. D. Supply shut-off valve not fully open.	A. Adjust water level. B. Unclog trapway. C. Clear obstruction from soil pipe or vent. D. Open supply shut-off valve.
7. Toilet overflows.	A. Toilet trapway is obstructed. B. Soil pipe or vent is obstructed.	A. Use plunger to unclog. B. Clear obstruction from soil pipe to vent.

Flush valve A:

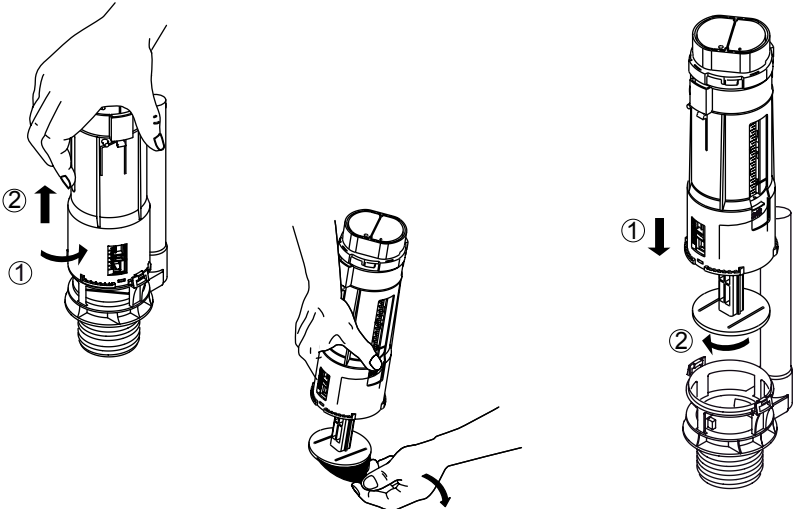

Flush valve B:

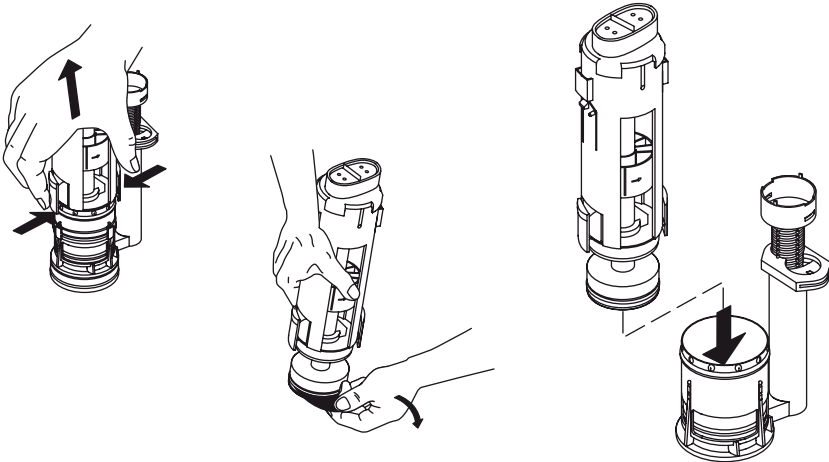

Replace the Seal

- ❑ Shut off the water supply to the toilet. Flush the toilet to relieve water pressure in the flush valve.
- ❑ Carefully remove the cistern cover, and set it upside down on a clean, soft surface.
- ❑ Note the position of the coloured buttons on the top of the flush valve canister for reinstallation.
 - A. Turn anti-clockwise and pull straight up on the canister out of the flush valve.
 - B. Squeeze the tabs on both sides of the canister, and pull the canister straight up and out of the flush valve.
- ❑ Remove and replace the seal on the bottom of the canister.
- ❑ Reinstall the canister:
 - A. Push straight down into place and turn clockwise.
 - B. Pressing it into the flush valve so it snaps into place.
- ❑ Rotate the canister as needed so the coloured buttons are in their original positions
- ❑ Carefully reinstall the cistern cover onto the cistern.
- ❑ Turn on the water supply to the toilet.
- ❑ Flush the toilet several times using first one push button and then the other to verify proper operation.
- ❑ Check for leakage.

CONTACT AND WARRANTY INFORMATION

For warranty information, please visit our website:

Australia

www.au.kohler.com

New Zealand

www.kohler.co.nz

KOHLER®

CALL US FOR HELP


NEW ZEALAND
KOHLER NZ LTD

Free Ph: 0800 564 537 (0800 KOHLER)
Free Fax: 0800 664 488
www.kohler.co.nz

AUSTRALIA
KOHLER CO.

Free Ph: 1 800 KOHLER
(1 800 564 537)
www.au.kohler.com


Part Identification

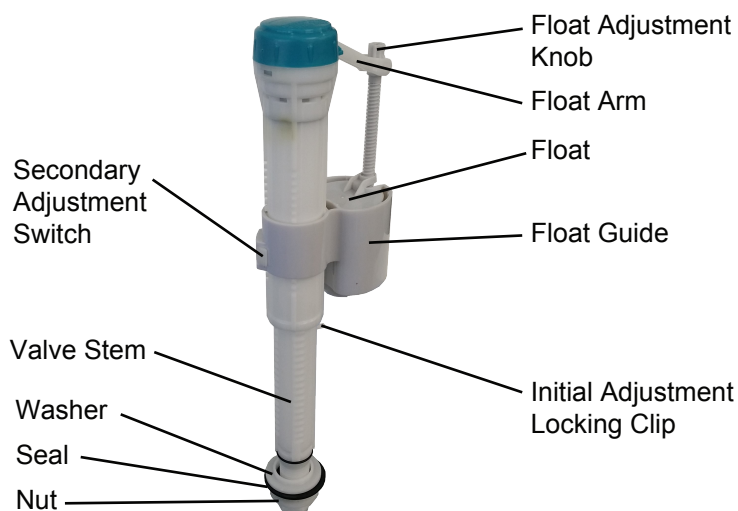


Before you begin, turn the float adjustment knob so that the top of the float is level or slightly above (0-3mm) the top of the float guide.

Valve Height Check

- 1) On the inside of the cistern, measure the distance from the marked water level line to the base of the cistern.

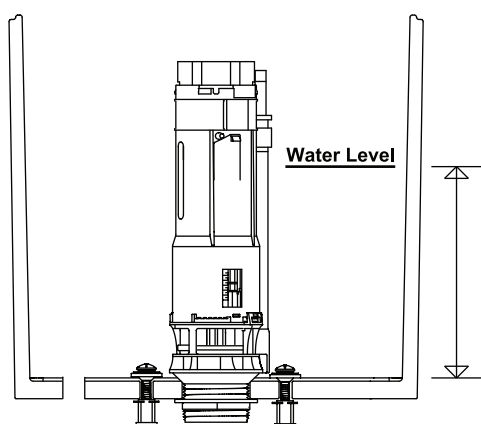


- 2) Measure the distance between the top of the float and the top of the thread on the valve stem. If this height matches that in step 1, skip to Valve Installation. Else proceed with Initial Valve Adjustment.

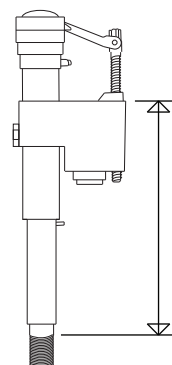


Initial Valve Adjustment


- 1) Remove the valve locking clip by firmly sliding it directly down.

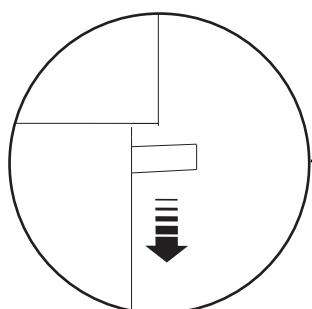


- 2) While holding the stem of the valve, turn the float guide assembly anti-clockwise approximately 1/8th of a rotation.

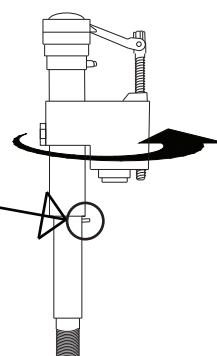

- 3) Adjust the height by sliding the stem in or out of the main body, so that the float height equals the cistern water level height (refer to page 1).

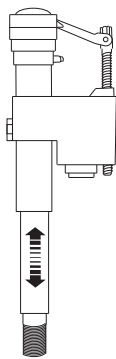


- 4) Lock the valve at the desired height by turning the valve assembly clockwise. Replace the locking clip.

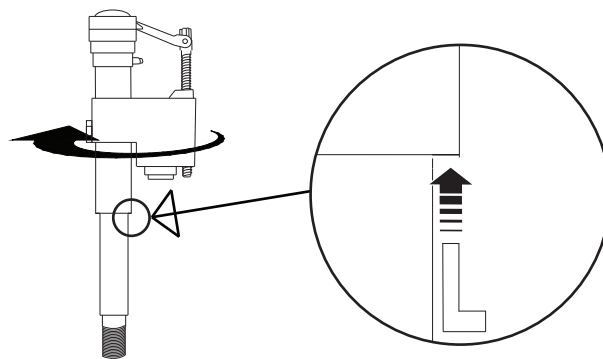

- 5) If the valve interferes with the cistern lid when put in position, reduce the height to clear and proceed to Secondary Valve Adjustment. If there is no interference, skip to Valve Installation.


Secondary Valve Adjustment

- 1) Flick the adjustment switch from CLOSE to OPEN position.
- 2) Slide the float guide down to the bottom of its range.
- 3) Turn the float adjustment knob until the top of the float is at the required water level.
- 4) Slide the float guide up so that the top of the guide is aligned or slightly below (0-3mm) the top of the float.
- 5) Flick the adjustment switch from OPEN to CLOSE position.
- 6) Repeat Initial/Secondary Valve Adjustments as required until there is no further interference with the cistern lid. Proceed to Valve Installation.

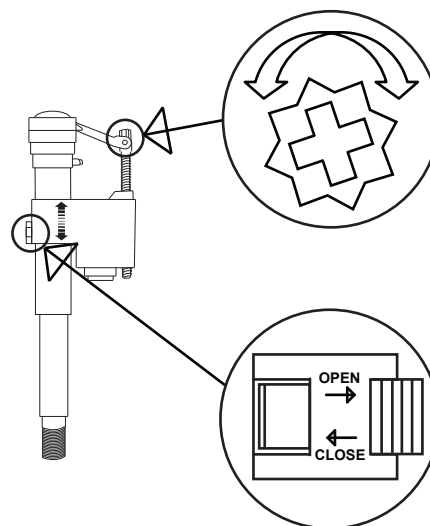


Valve Installation

- 1) Remove and discard the bung if present.
- 2) Place the washer and seal over the thread.
- 3) Locate the valve in the Bottom Inlet hole in the cistern. Ensure there is no interference with other cistern components.
- 4) Securely tighten the nut onto the valve thread and test for leaks.
- 5) Ensure that the top of the valve float aligns with the cistern water level mark. If not, further adjustment may be required.

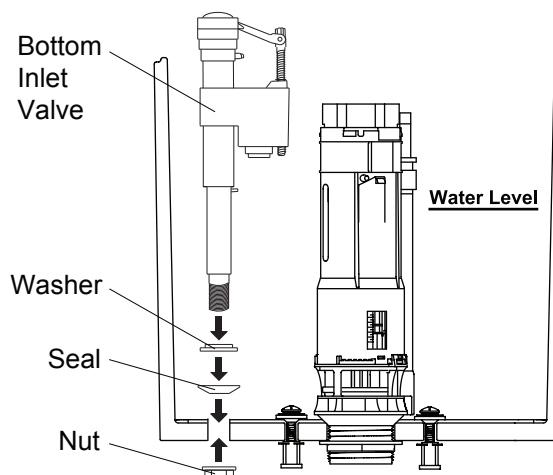

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

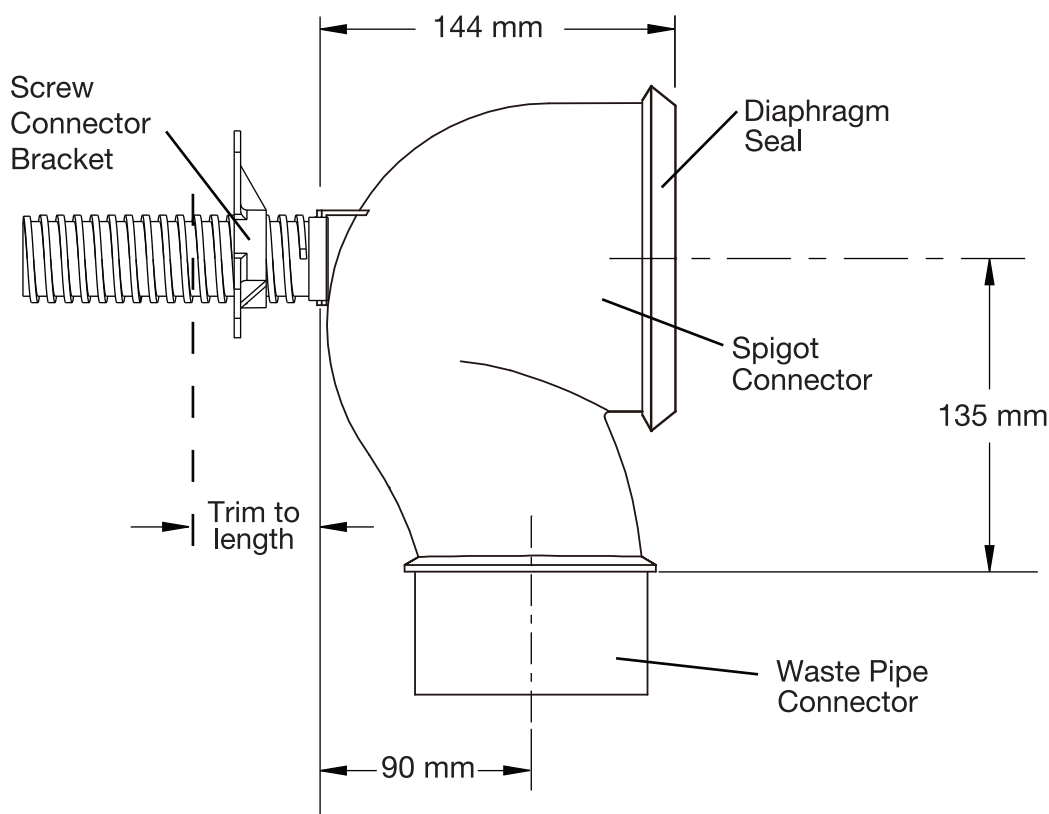

BEFORE YOU BEGIN

Important: Installation of this Vario Connector must be done in accordance with AS/NZS3500.1.

This connector must be installed with a pan collar (straight or offset). Your plumber can provide this if it is not supplied.

The Kohler Vario Pan Connector can be used for S-trap toilet pan installations. For pans with a P-trap outlet, it converts the toilet pan from a P-trap to S-trap.

Depending on the pan geometry, this Vario Pan Connector is suitable for set-outs ranging from 90mm to ≈ 140 mm with a 20mm offset pan collar.

Ensure to maintain a minimum of 30mm overlap between the pan spigot and the Diaphragm Seal.



CAUTION: The trim cut(s) must be made square to the connector. Rotating the components during trimming can help keep the cut even.

INSTALLATION

Insert the waste pipe connector into the pan collar.
It may be necessary to trim the waste pipe connector by approx 15mm so that it fully engages the pan collar.




Check the fit of the assembled connector + pan collar between pan, wall and waste pipe.

For mid-range set-outs (reduced offset), rotate pan connector along the axis of the spigot, while rotating the offset pan collar as required.

Cut the Screw Connector Bracket to length, slot it over the mount on the rear of the Spigot Connector and attach to the wall.

Lubricate Diaphragm Seal and carefully push the toilet pan back into the Vario Connector.

Proceed with pan installation as per the instructions supplied with the toilet.

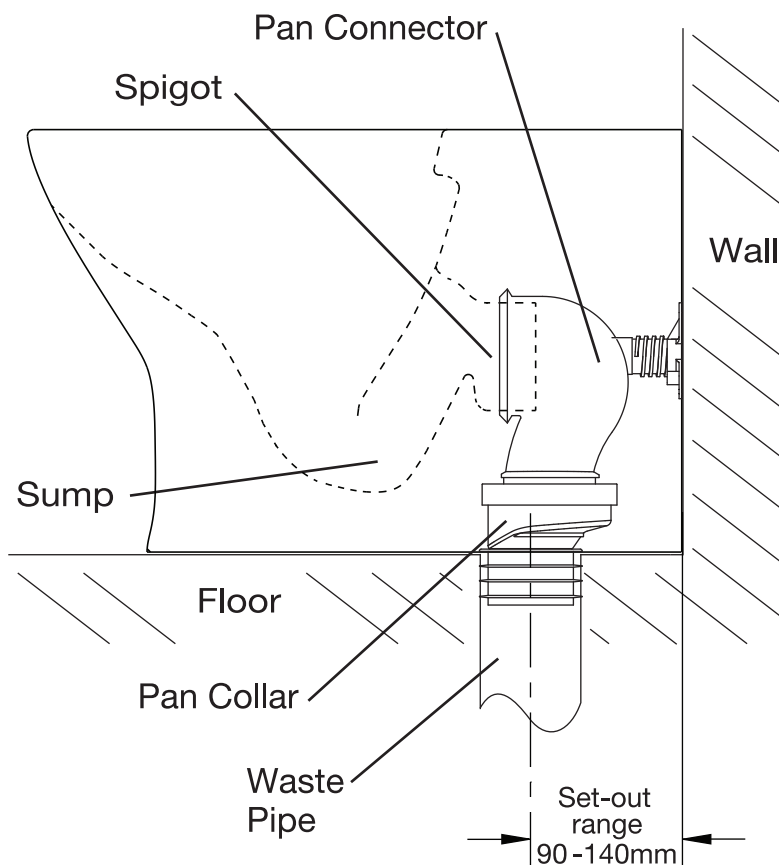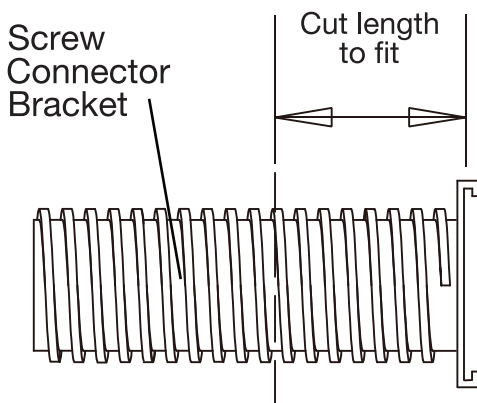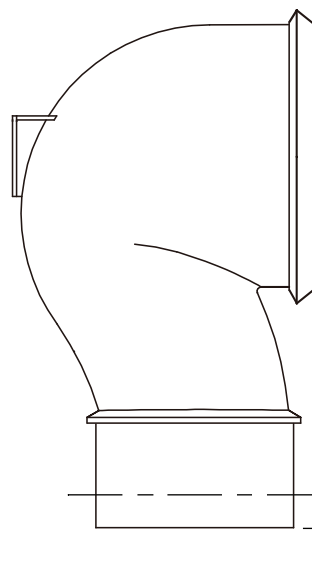

CONTACT AND WARRANTY INFORMATION

NEW ZEALAND
KOHLER NZ LTD
Free Ph: 0800 564 537
(0800 KOHLER)
Free Fax: 0800 664 488
www.kohler.co.nz

AUSTRALIA
KOHLER CO.
Free Ph: 1800 564 537
(1800 KOHLER)
www.kohler.com.au