
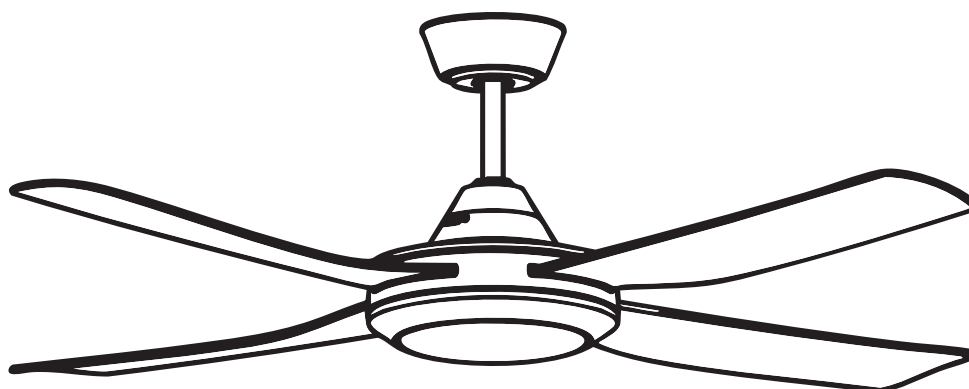


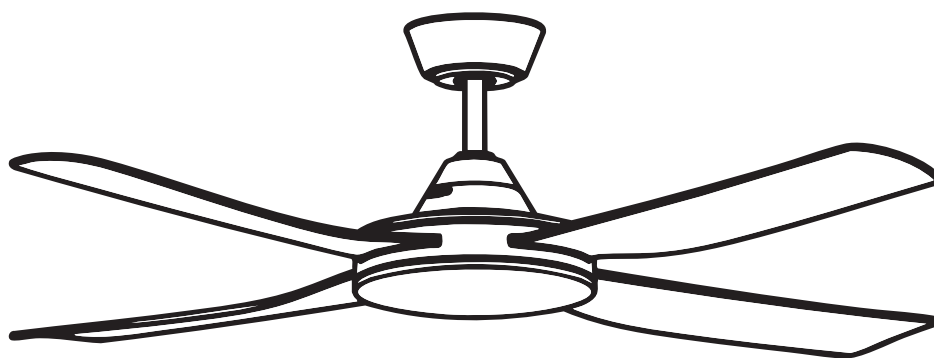

Bondi Ceiling Fan

48": 203619, 203621, 204739

52": 203624, 203625, 204742

Bondi Ceiling fan with LED Lights

48": 203622, 203623, 204741

52": 203626, 203627, 204743



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for more information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain, damaging your health and well-being.

EGLO Lighting has a policy of continual product improvement and development, dimensions, hardware and designs may change to reflect this policy. EGLO reserves the right to discontinue or change product specifications & designs at any time without notice and without incurring obligations. The images including all features and specifications in this manual are for illustrative purposes only. Product details, images & line drawings may vary depending on specific product models.

TABLE OF CONTENTS

FOR YOUR SAFETY:

WARNING	4
---------------	---

BEFORE INSTALLATION:

WHAT COMES IN YOUR BOX	5
ACCESSORIES (SOLD SEPARATELY)	5
SPECIFICATIONS	5

INSTALLATION:

SELECTING A LOCATION	6
INSTALLING THE MOUNTING BRACKET	6
INSTALLING THE FAN	7

ELECTRICAL CONNECTIONS:

WIRING DIAGRAM	9
----------------------	---

OPERATION:

KNOW YOUR WALL CONTROL	10
LIGHT COLOUR CHANGE	10
SUMMER / WINTER MODE SWITCH	10

CLEANING & MAINTENANCE:

CLEANING	11
MAINTENANCE	11

TROUBLESHOOTING:

TROUBLESHOOTING	12
TROUBLESHOOTING CHECKLIST	12

WARRANTY:

WARRANTY CLAIMS ON INSTALLED PRODUCTS	13
1. AUSTRALIAN CONSUMER LAW	13
2. LIMITED REPAIR / REPLACEMENT WARRANTY	13
3. IN-HOME WARRANTY	14
4. WARRANTY TRANSFER	14
5. WHATS NOT COVERED	15
6. COMMERCIAL USE	16
7. WARRANTY CONDITIONS	16
HOW TO MAKE A WARRANTY CLAIM	16




Warning!

1. Please read this manual carefully before attempting the assembly or installation of your new ceiling fan.
2. ALL electrical work should only be carried out by a suitably qualified and licenced electrical contractor. This ceiling fan MUST be installed ONLY by a suitably qualified and licenced electrical contractor.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance, by a person responsible for their safety.
4. Do NOT allow children to play with this appliance and supervise children around electrical devices at all times.
5. Before commencing any electrical work, ensure the power is disconnected and/or the mains switched off at the circuit box and ensure all pole isolation of the power supply.
6. The fixing point for your ceiling fan must be of sound construction, undamaged, and capable of supporting a load of 35Kg, or 4 times the weight of the fan plus the method of attachment, whichever is greater. Verifying the stability of the mounting structure is the sole responsibility of the consumer and qualified installer.
7. Care needs to be taken to ensure the installation location does not allow the fan blades to come into contact with any object or surface. There must be a minimum of 30 cm clearance between the blade tip (end) and the nearest wall or object. Reduced clearances to walls or ceilings can also reduce the amount of air your fan can move.
8. The installation must also allow for a minimum clearance of 2.1 m between the floor and the bottom of the blades. The installation must allow for a minimum of 3.0 m between ceiling fans.
9. Do not install or use your fan if any part/s are damaged or missing. Use only EGLO replacement parts.
10. Both the ceiling fan and the hanging bracket must be earthed.
11. The fan must be connected to a mains supply only. Fans connected directly to alternate power systems such as Solar, Wind, Battery etc will not be covered under the terms of this warranty.
12. **WARNING:** To reduce the risk of electrical shock and fire, do not use this fan with any solid-state fan speed control device. Install and operate with ONLY the EGLO controller supplied with your fan, or a suitable EGLO controller designed specifically for your fan.
13. **WARNING:** Do not insert foreign objects into or in-between rotating fan blades.
14. ONLY change the direction of your fan as instructed to in this manual.
15. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.
16. All EGLO products are warranted to be free from defects in workmanship and materials provided the products are used with a voltage supply within the range the product is designed to operate.
17. This fan is designed for indoors use, and for areas that are suitable covered to ensure that no water or moisture can come into direct contact with the ceiling fan.
18. EGLO lighting will not be liable for any advice given to the consumer from any of our suppliers or third parties, related or otherwise.
19. Proper performance relies on the right fan being correctly installed in the optimum location. Fans that do not perform as expected and which are not faulty cannot be replaced or exchanged under warranty.
20. The important safeguards and instructions in this manual are not designed to cover every possible condition or circumstance. It is understood that common sense, caution and care are factors that cannot be built into the product, those using and maintaining this product must supply these factors.


BEFORE INSTALLATION

What Comes In Your Box:



With Light models



No Light models

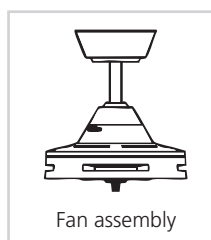

Mutual parts

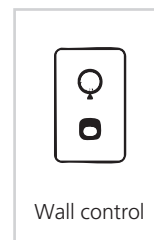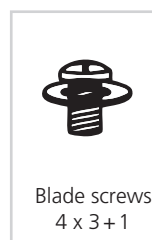

- Carefully unpack your fan on a soft surface to avoid damage to the fan finish.
- Do not lay the motor housing on its side to avoid damage to decorative components.
- Check that all parts are present before commencing assembly. If any parts are missing, check the packaging, and if they cannot be located, contact EGLO for assistance before commencing installation.

Accessories (Sold Separately):

- Remote Control:** 203633 – 3 speed remote control kit
205127 – 4 speed remote control kit
205487 – 4 speed remote & App control kit (smart)
- Downrods:** Available in a variety of lengths. (sold separately)
- Canopy:** Angle canopy for ceilings with pitch up to 38 - deg. (sold separately)

For more information on available accessories visit: www.eglo.com/au/ceiling-fans/ceiling-fan-accessories.html

Specifications:

- Input:** AC 220–240 V, 50 Hz.
- Controller:** Hard-wired wall control
- Fan Wattage:** 48": 56 W
52": 60 W
- Light Wattage:** 20 W (light models only)
- Canopy Angle:** 15 degree (10 degree with remote fitted)
- Weight:** 48": No light models – 6.3 kg, LED models – 6.7 kg
52": No light models – 6.5 kg, LED models – 6.9 kg
- Dimensions:** 48": Ø 1219 mm, Total Height: 316 mm (no light) / 334 mm (with light)
52": Ø 1321 mm, Total Height: 316 mm (no light) / 334 mm (with light)

INSTALLATION

Selecting A Location

- The ceiling fan must be installed in a location so that the blades are a minimum 30 cm spacing from the tip of the blade, to the nearest objects or walls. (Fig. 1)
- The ceiling fan must be installed in a location so that the blades are a minimum 2.1m above the floor.
- The fixing point for your ceiling fan must be of sound construction, undamaged, and capable of supporting a load of 35 kg, or 4 times the weight of the fan plus the method of attachment, whichever is greater. If the location does not have a solid mounting point, you will need to install a timber support between two ceiling joists. (Fig. 2)
- Many EGLO fans are designed for indoor use, though they can also be installed in appropriately covered outdoor locations where the fan is fully undercover with a minimum of 2 walls. This fan is not water-proof. When installed in outdoor areas, the ceiling fan must be installed in a location protected from water, wind, dust, and salt. Exposure to these elements will void the warranty. In some more tropical areas of Australia, it is suggested you increase the distance from the fan to the edge of the roof.

Fig. 1.


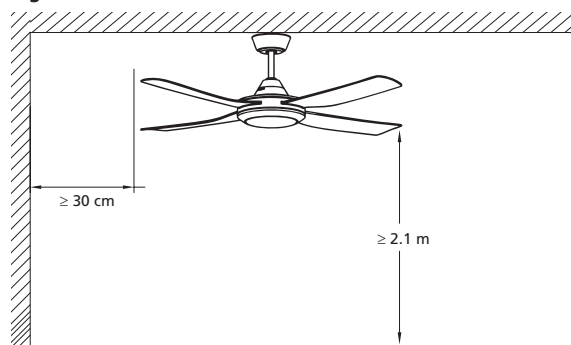


Fig. 2.

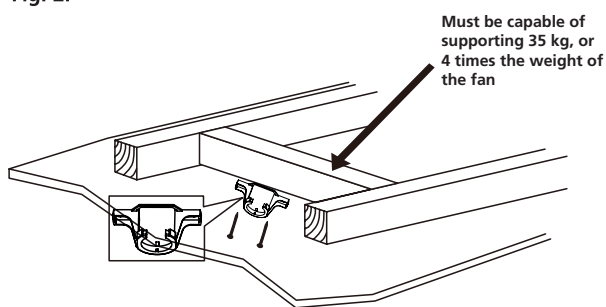

Note: Image is for representation only, and does not represent the actual bracket.


Installing The Mounting Bracket

IMPORTANT: CHECK THAT THE POWER IS DISCONNECTED AND/OR THE MAINS SWITCHED OFF AT THE CIRCUIT BOX TO ENSURE ALL POLE ISOLATION OF THE POWER SUPPLY.

Installing onto Joist or Timber Support:

1. Install the mounting bracket to the ceiling joist or timber support with the long installation screws provided. Pass the screws through the round holes in the mounting bracket and secure to the ceiling. (Fig. 3)
2. Install safety cable screw to the side of bracket
3. Ensure that at least 30 mm of the screw is threaded into the ceiling joist or timber support.

Fig. 3.

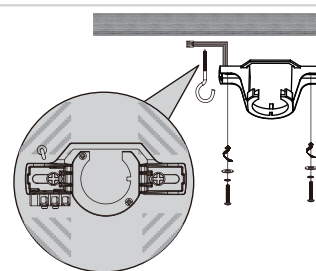


Note: Ensure that the cable entry is positioned only in the shaded sections, or it could obstruct the installation for remote receiver.

Installing onto Concrete Ceiling:

1. Install the mounting bracket to the concrete ceiling with expansion bolts. Pass the bolts through the round holes in the mounting bracket and secure to the ceiling. (Fig. 4)
2. Install an expansion bolt with hook to the side of bracket and secure tightly to enable safety cable connection.

Fig. 4.

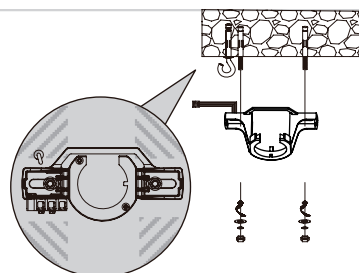

Note: Ensure that the cable entry is positioned only in the shaded sections, or it could obstruct the installation for remote receiver.


INSTALLATION

Installing the fan

- **FOR YOUR SAFETY, ALL ELECTRICAL CONNECTIONS MUST ONLY BE UNDERTAKEN BY A QUALIFIED AND LICENCED ELECTRICIAN!**
- For safe use of ceiling fans fan, an all-pole disconnection **MUST** be incorporated into the fixed wiring in accordance with the wiring rules, as outlined in clause 7.12.2 of AS/NZS 60335-1 for meeting the minimum electrical safety of this standard.
- A single pole isolation switch must be also placed in the same room as the fan as per local wiring regulations AS/NZS 3000, in accordance with clause 2.3.2.2.1& 4.13.1.3 of AS/NZS 3000. If there are two or more ceiling fans installed in the one location/room, an isolation switch is required for **EACH** ceiling fan. This is required when programming any remote-control transmitter & receiver to pair together, and for fan servicing.


1. Fix mounting bracket to the ceiling with proper screws, ensure that the cable entry is positioned within coverage of bracket & housing. (Fig. 5)

Fig. 5.

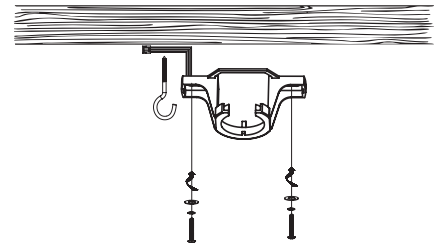


2. Carefully lift the fan assembly up to the mounting bracket, seat the down rod ball assembly into the bracket, ensuring the notch in the hanger ball is positioned on the stopper of the mounting bracket to prevent the fan from rotating when in operation. Install the safety wire to the ceiling, the safety wire must be adjusted as short as possible and secured until snug. (Fig. 6)

Fig. 6.

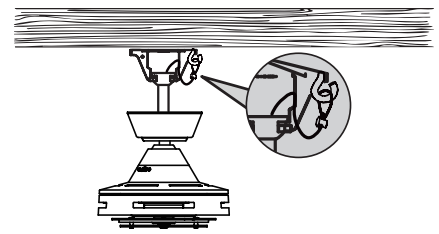


3. Complete wiring per Wiring Diagram (Fig.12 / Fig.13), tuck all cables and then fix canopy & canopy ring with screws. (Fig. 7)

Fig. 7.

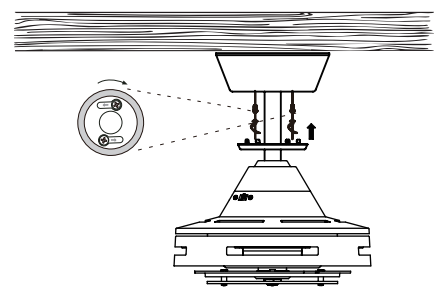

4. Insert blade through slot and fix with provided blade screws. (Fig. 8)

Fig. 8.

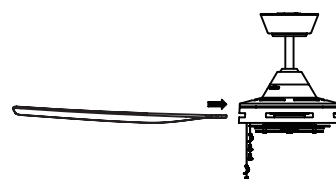

INSTALLATION

Installing the fan (continued):

5. **For with light models,** install light kit by pushing & click in. (Fig. 9), connect light wire to terminal, and then twist lock in light shade. (Fig. 10)
6. **Non-Light models:** Twist lock Decorative cover to the bottom of motor. (Fig. 11)

Fig. 9.

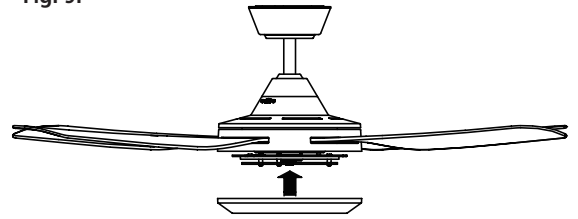


Fig. 10.


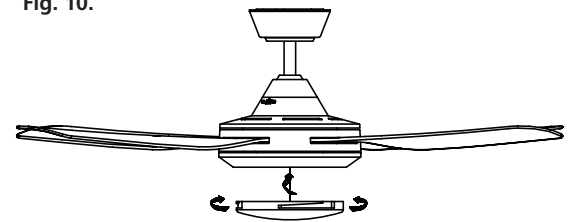


Fig. 11.

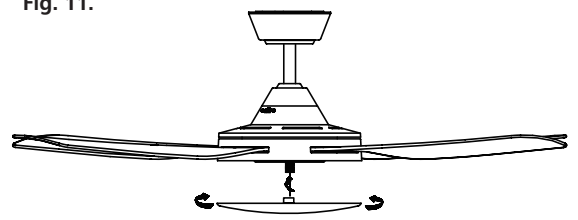

ELECTRICAL CONNECTIONS

Wiring Diagram:

- For safe use of ceiling fans fan, an all-pole disconnection **MUST** be incorporated into the fixed wiring in accordance with the wiring rules, as outlined in clause 7.12.2 of AS/NZS 60335-1 for meeting the minimum electrical safety of this standard.
- A single pole isolation switch must be also placed in the same room as the fan as per local wiring regulations AS/NZS 3000, in accordance with clause 2.3.2.2.1& 4.13.1.3 of AS/ NZS 3000.
- If there are two or more ceiling fans installed in the one location/room, an isolation switch is required for **EACH** ceiling fan. This is required when programming any remote-control transmitter & receiver to pair together, and for fan servicing.

Fig. 12.

(With Light Models)




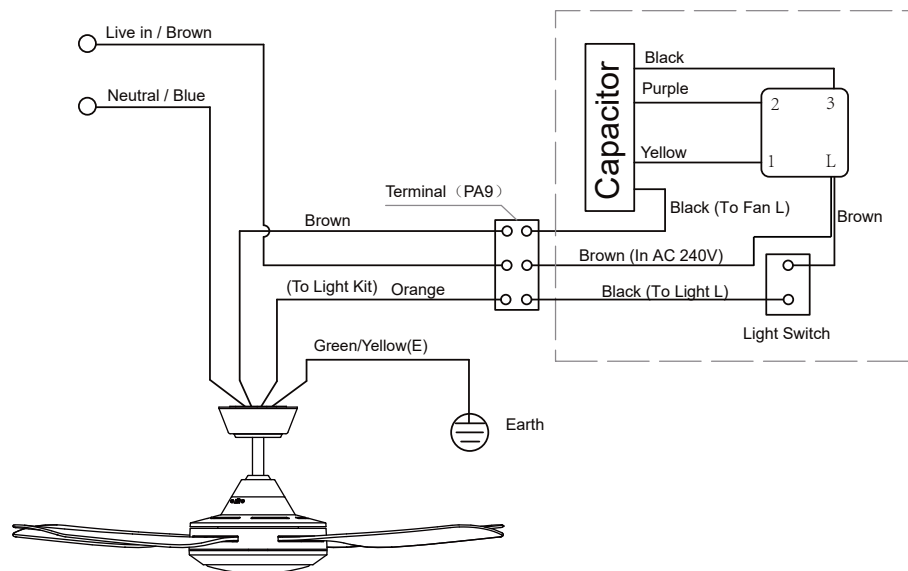


Fig. 12.

(No Light Models)

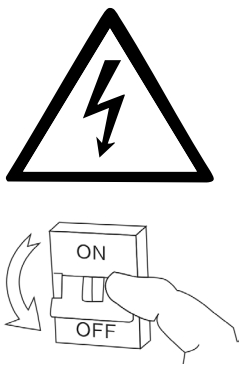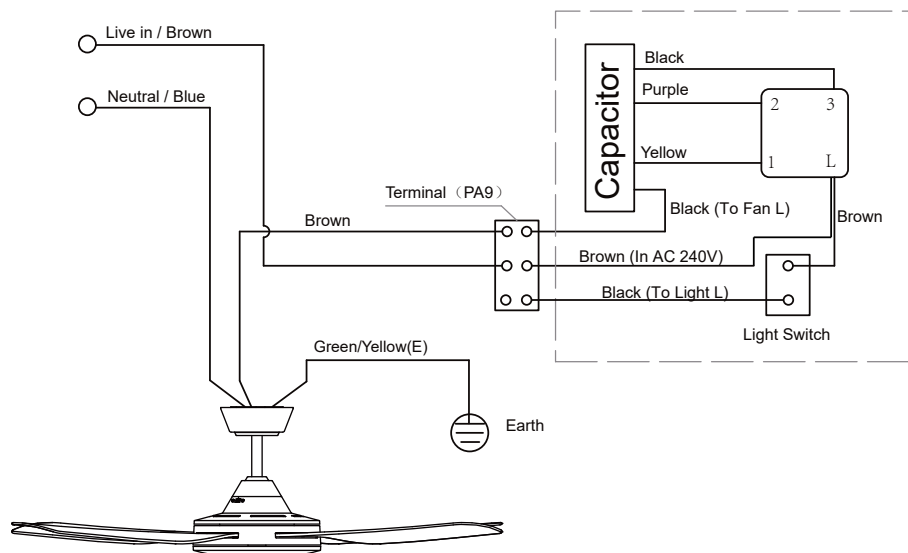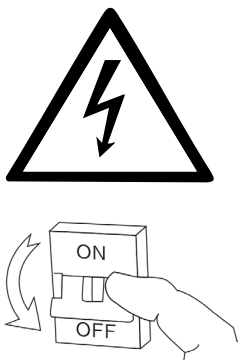

OPERATION


Know your Wall Control:

FAN CONTROL


- 1 - Low Speed
- 2 - Medium Speed
- 3 - High Speed
- OFF - Fan OFF

LIGHT CONTROL - Light ON/OFF plus step dimming function


- Turn off/on within 3 seconds for 50 %,
- Turn off/on again within 3 seconds for 25 %,
- Turn off/on again within 3 seconds to reset to 100 %
- Turn off/on exceed 3 seconds to return to 100 %

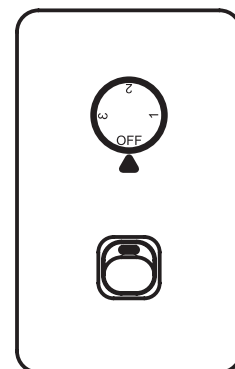

Light colour change:




1. Disconnect/cut from power supply before operation.
2. Twist off light shade, move dip switch to different position to select desired light colour.
3. Turn power back on.

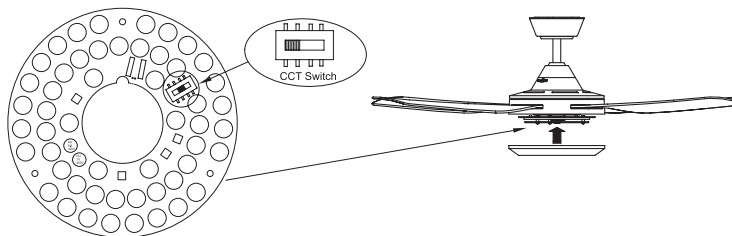


Note: Disconnect/cut power supply before making changing light colour!

Summer / Winter mode switch:



1. Turn OFF Fan, **disconnect power supply** before operation.
2. Reach this switch via ladder, move switch to either side for Summer (downward) or Winter (upward).
3. Get off ladder, turn power back on.

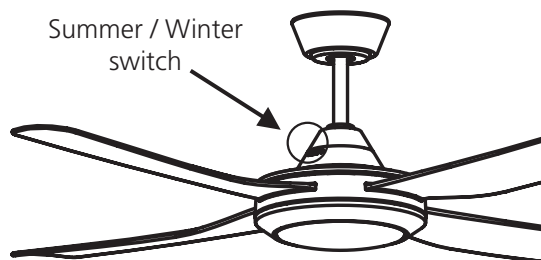

Note: Disconnect/cut power supply before making changing fan direction!



SUMMER (Forward / Downward)

For a cooling effect during summer, your fan should run in a counter-clockwise direction, forcing the room air down and outwards creating a wind chill effect that makes you feel cooler.



WINTER (Reverse / Upward)

During the winter, your fan should run in a clockwise direction at low speed. This will gently draw the warmer air down from the ceiling, balancing the rooms temperature, and allowing you to lower your heating thermostat.

CLEANING & MAINTENANCE

Cleaning:

All EGLO ventilation products should be cleaned regularly to insure against corrosion from salt, dust and moisture, both externally and internal (where allowed and possible). Cleaning your fan periodically will help maintain its appearance over the years.

All electroplated components have been sealed with a lacquer to minimize discoloration or tarnishing. To avoid scratching these finishes, use only a soft brush or lint-free cloth. For painted finishes, cover any small scratches with a light application of shoe polish in a suitable colour.

Do not use water when cleaning. Water can damage the motor or could cause an electrical hazard. Surface smudges or an accumulation of dirt and dust can easily be removed by using only a slightly dampened cloth. Do NOT use abrasive cleaning agents as they may damage the finish.

Maintenance:

Your fans natural movement can cause screws to loosen. Every 6 months, check that ALL screws are securely tightened with a screwdriver. All EGLO ventilation products should be cleaned regularly to insure against corrosion from salt, dust and moisture, both externally and internal (where allowed and possible).

Troubleshooting

WARNING: CEILING FAN MUST BE SWITCHED OFF AND ISOLATED BEFORE COMMENCING ANY TROUBLE SHOOTING!

WOBBLE / BALANCE:

Please note that all ceiling fans are not the same, even fans of the same model, some may move more or less than others. Movement of a few centimetres is quite acceptable and does not suggest the fan will fall if installed correctly.

All ceiling fan blades are weighed and grouped by weight. It is impossible to eliminate wobble altogether and it should not be considered a fault. Ceiling fans tend to move during operation because they are not rigidly mounted.

To reduce the fan wobble:

- Check that all screws which fix the fan assembly with the mounting bracket are all tightly secured.
- Wobble may result from inconsistent blade level. Check this by measuring from the tip of the blade to the ceiling and repeat on every blade. If the measurements are different:
 1. Check that the blade screws are not overly tightened, or loose, causing difference in blade tip height.
 2. Out of shaped blades can unbalance the fan and cause wobble. Check by removing all blades and stacking on a flat level surface, and ensure all blades are a uniform shape.
 3. Interchanging blades can redistribute the weight and result in smoother operation.

Troubleshooting Checklist

PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
Fan or Light will not start.	Fuse or circuit breaker blown.	Turn power OFF. Check circuit fuses and circuit breakers.
	Loose connections to fan.	Turn power OFF. Check connections at terminal block.
	Controller/switch issues.	Check that fan controller is in the correct position. For remote controls with Code Pairing Synchronization, re-pair remote transmitter to remote receiver.
Fan Wobbles.	Fan hanger ball not seated correctly in ceiling mounting racket.	Turn power OFF. Support the fan very carefully and rotate the hanger ball to ensure the notch on the hanger ball engages with the ridge on the mounting bracket.
	Fan blades are not horizontal to the ceiling.	Refer to 'WOBBLE / BALANCING' section of manual.
	Blade screws are loose.	Check that all screws are securely tightened. Do NOT overtighten.
	Fan requires balancing.	Use a Blade Balancing Kit to balance the fan. (sold separately)
Fan sounds noisy.	Top canopy touching ceiling.	Lower the decorative canopy so that it does not contact the ceiling.
	Loose housing screws.	Make sure all motor housing screws are tight.
	Loose blade screws.	Check that all screws are securely tightened. Do NOT overtighten.
	Mounting bracket not installed correctly.	Turn power OFF. Check and if necessary, re-install the ceiling mounting bracket if not installed correctly.
	Incorrect controller.	Turn power OFF. Change the controller to the supplied ontroller.
	NOTE: When it is quiet at night, you may hear occasional small noises, THIS IS NORMAL! Please allow a 24-hour ,settling-in' period, as most noises associated with a new fan disappear during this initial period. All electric motors make noise to some extent.	

Warranty Claims On Installed Products

EGLO Lighting (EGLO) will not be liable for charges incurred by the consumer for rectification, deinstallation or reinstallation unless approved by EGLO management in writing prior to commencing work.

All claims are to be submitted to EGLO Warranty Department with a copy of the original purchase receipt, copy of receipt from installation (incl. electrical contractor licence number), and completed EGLO warranty claims form. Incomplete submission will result in delays processing your claim. Any additional photos, videos or information that can be supplied at the time of submission, will help expedite your claim.

1. Australian Consumer Law

The benefits given to you the consumer in this warranty document are in addition to your other rights and remedies under a law in relation to the products to which this warranty document relates.

“YOUR CONSUMER RIGHTS”: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Subject to “Your Consumer Rights” outlined above, but otherwise to the maximum extent permitted by law, EGLO will not be liable for any consequential or indirect loss or damage suffered or incurred by you in relation to an EGLO product including but not limited to loss of use, loss or damage for business interruption, or profits.

2. Limited Repair / Replacement Warranty

EGLO offers the purchaser a repair or replacement of the EGLO product in cases where the product fails due to defective materials or workmanship, when installed and operated under normal domestic conditions, for a period of 6 years (3 years parts & labour + 3 years parts only) from the date of purchase. The RF wall control and accessory handheld remote-control accessory is covered by a 12-month replacement warranty. Please refer to the warranty period listed on each product to determine the warranty period which EGLO grants to the original purchaser of the EGLO product. The warranty period begins from the date of purchase. Also, please refer to WHAT IS NOT COVERED.

You must provide proof of purchase (such as the original dated purchase receipt/invoice) from an authorised EGLO reseller to make a warranty claim. You must also provide a receipt from installation, including the electrical contractors licence number - if an electrical licence number cannot be supplied, your claim will be denied. This warranty will not apply if the ceiling fan is installed by anyone other than a qualified and licensed electrical contractor.

Resetting/Changing of DIP switches in connected remote controls is not covered by warranty and a service call fee WILL apply.

Batteries (if supplied), are done so as a complimentary (free) item only and are not covered by warranty.

REPAIRS / REPLACEMENTS

EGLO products presented for repair may be replaced by refurbished goods of the same type rather than being repaired at the discretion of EGLO. Refurbished parts may be used to repair the goods to proper order.

BALANCE OF WARRANTY

To the maximum extent permitted by law, any product replaced, repaired or refurbished by EGLO is covered only by the balance of the warranty period remaining from the date of original purchase of the original EGLO product.

3. In-Home Warranty

PLEASE KEEP THE PRODUCT INSTALLED FOR WARRANTY TROUBLESHOOTING & RECTIFICATION BY EGLO.

NOTE: EACH FAN OR FANS MUST HAVE AN INDIVIDUAL ALL POLE DISCONNECTION (ISOLATION/WALL SWITCH) PER FAN.

In addition to the limited warranty terms set out under section (2) above, the in-home warranty applies for the first 3 years from the date of original purchase, to all ceiling fans which are hard wired to the electricity supply at residential premises and are required to be installed by a licensed electrician.

Where a consumer asserts that a product installed in-home is faulty, and an EGLO service agent attends the property, A SERVICE CALL FEE WILL BE CHARGED TO THE CONSUMER IF:

1. The product is deemed to be a non-EGLO product.
2. There is nothing wrong with the EGLO product or to the extent that the failure is not a failure of the product to perform in accordance with its published features and specifications as reasonably determined by EGLO.
3. The fault is deemed to be with a non EGLO branded or supplied control, and not the EGLO ceiling fan.
4. The original installation of the EGLO product was not carried out by a qualified and licensed electrician.
5. The installation is not performed in accordance with the relevant EGLO product installation instructions and all relevant local legislation, regulation and by-laws.
6. The defects have been caused by incorrect installation, application, operation, abuse or misuse by the consumer of the EGLO product.
7. In cases of in-home repair/replacements in areas outside the coverage of EGLO service agents, EGLO will reimburse customers a standard fee of \$110.00 (Inc. GST) for using their own electrician. To the maximum extent permitted by law, in cases where the installed product is outside the coverage of EGLO service agents, EGLO reserves the right to request a different electrician attend to the service call, if there is reasonable expectation that the fault may be the result of something other than the EGLO product.
8. BEFORE CALLING YOUR ELECTRICIAN, contact EGLO to make a service request with the EGLO warranty department and obtain an Warranty Claim Number. Reimbursements will not be made for call-out fees or other costs without prior approval in writing of the EGLO warranty department.
9. The cost of repairs and/or service call where the fault is due to the installation and not due to faulty materials or manufacturing workmanship, will be payable by the consumer.
10. In the circumstances where an emergency has arisen out of normal business hours and the EGLO warranty department cannot be contacted to dispatch a service agent to the premises, EGLO will reimburse customers their reasonable costs (as determined by EGLO) for using their own electrician.
Note: An emergency is only considered where the product is presenting an immediate & present danger. Products that have simply stopped working, or a not operating sufficiently, DO NOT constitute an emergency.
11. Failure in part of the consumer to pay for the service call in case of any of the above, will result in the balance of the warranty being void, until all outstanding amount including taxes and costs have been recovered in full.

4. Warranty Transfer

If the ownership changes on the dwelling/premises where the EGLO product is installed, the balance of the warranty period passes to the new owner provided the original proof of purchase (such as the original dated purchase receipt) from an authorised EGLO retailer is retained by the new owner. In addition, proof of installation & licence number of the original installing electrician must be retained.

5. What Is Not Covered

Subject to "Your Consumer Rights", but otherwise to the maximum extent permitted by law, the EGLO warranties provided in this document will not cover the following:

1. EGLO products that are not purchased from an authorised reseller in Australia and installed in Australia.
2. Where installation was not carried out by a qualified and licensed electrical contractor or where a valid Electrical Safety Certificate cannot be presented.
3. EGLO products not installed in accordance with the product's installation instructions or specifications.
4. EGLO products not operated in accordance with the instructions for use, or specifications.
5. EGLO products that have been modified in any manner, painted or used with non-standard blades, controllers (including capacitors), or mountings.
6. Changes to the painted or plated finishes of the ceiling fan motor or blades due to climate conditions (moisture, salt, dust, etc), or after 12 months from the date of original purchase.
7. Defect, damage or failure to an EGLO product resulting from misuse, accident, neglect, abuse, tampering, modifications or unauthorized repairs of any kind by any person.
8. Damages not caused by a fault in the EGLO product materials or workmanship.
9. Defect, damage or failure to an EGLO product resulting from any acts of God, including damages from lightning, power grid fluctuations, or power surges.
10. Replacement of light sources (globes, LED boards, etc) unless specified.
11. Replacement of batteries supplied with certain products.
12. Power supply "noise", intermittent "humming", or other influences from mains power delivery infrastructure. Signals sent through the power grid by the electricity provider for the control of off-peak hot water, streetlights and other devices may cause an intermittent humming noise in your EGLO product. Filters for blocking & reducing such signals are available in Australia at the customer's expense. These noises do not indicate the EGLO product is faulty.
13. Damage caused by alternative power systems. (for example: 'off grid' etc.)
14. Water damage of any kind caused by inappropriate placement of ceiling fans not IP rated for that location.
15. The cost of renting, obtaining and using special access equipment (i.e. scaffoldings, scissor lifts, etc.) for accessing products installed at a height of greater than 3.0 metres.
16. Travel costs incurred by EGLO personnel or service agents travelling greater than 50 Km from an EGLO service agent base. The purchaser must meet these travel costs.
17. Transportation and in-transit insurance costs, if the product or parts thereof have to be returned for repair or replacement to the retailer or the authorised service agent.
18. Non-structural corrosion damage of components such as surface rust or minor rust.
19. Except in the case of pre-packed integrated light models, light fittings attached to the fan are not covered by this warranty. Where the fan is pre-packed complete with a light, the light fitting will be covered by LIMITED REPAIR / REPLACEMENT WARRANTY.
20. Faults deemed caused by a lack of regular maintenance, e.g. screws and nuts becoming loose.

6. Commercial Use

EGLO products which are specifically designed for commercial use are designated as Commercial Use Products on the product packaging.

All other EGLO products are designed for domestic use only. This fan is not designed or warranted for commercial applications unless authorised in writing by an EGLO representative.

7. Warranty Conditions

1. This warranty is for 240 V 50 Hz products originally purchased in and installed in Australia ONLY.
2. Installation must be performed by a qualified and licensed electrician. The warranty will not apply if the product is installed by anyone other than a qualified and licensed electrician.
3. Problems arising from incorrect installation are not covered by warranty.
4. The cost of repairs and/or service call arising from incorrect installation, not due to faulty material or workmanship in accordance with the EGLO warranty, will be payable by the purchaser.
5. This warranty is only valid for appliances used according to the manufacturer's instructions.
6. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.
7. Warranty will only be provided where proof of qualified electrical installation is provided. E.g. Electrical Safety Certificate.
8. Warranty will not be provided if installation is without an all-pole disconnection incorporated in the fixed wiring in accordance with the wiring rules.
9. The manufacturer will not accept in home expenses unless authorisation is granted prior to work commencing, and a Warranty Claim Number allocated by EGLO.
10. Where a service call is undertaken and no fault is found with the ceiling fan, or where the fault is not covered under the terms of this warranty, a call-out fee may be charged.

How To Make A Warranty Claim



To make a warranty claim or seek assistance with this product, scan this QR code, and follow the link to:
<https://www.eglo.com/au/warranty-and-product-support>



EGLO LIGHTING AUSTRALIA

5/339 Archerfield Road

Richlands

Queensland 4077

www.eglo.com.au